

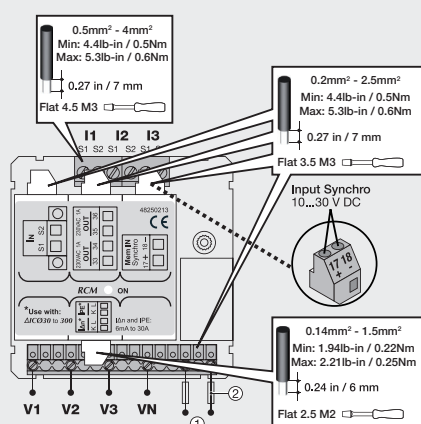
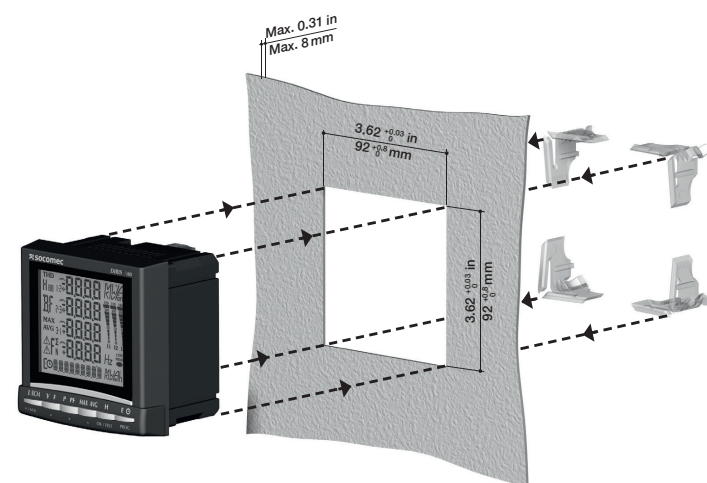


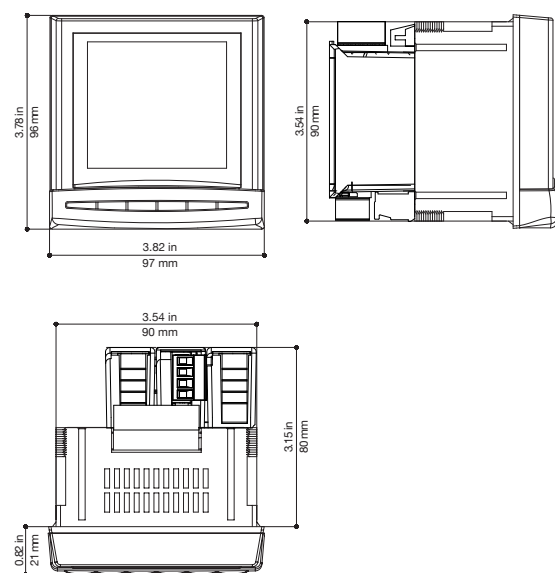

F ALIMENTATION AUXILIAIRE
GB AUXILIARY POWER
D HILFSSPANNUNG
I ALIMENTAZIONE AUSILIARE
NL HULPAGGEGATEN
E ALIMENTACIÓN AUXILIAR
P AUXILIAR DE ENERGIA
CN 辅助电源


① Aux.: 110 ... 400 V AC / 120 ... 350 V DC
 ② Fus.: IEC 0.5 A gG / BS88 2 A gG / 0.5 A class CC

50 ... 60 Hz

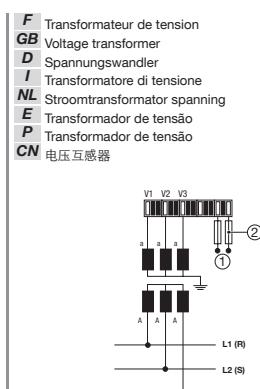


F Réseau monophasé (1BL)
GB Single-phase network (1BL)
D Einphasennetz (1BL)
I Rete monofase (1BL)
NL Enkefaseset (1BL)
E Red monofásica (1BL)
P Rede monofásica (1BL)
CN 单相电网 (1BL)

Version with 1 input and 1 output - ref. 48250214

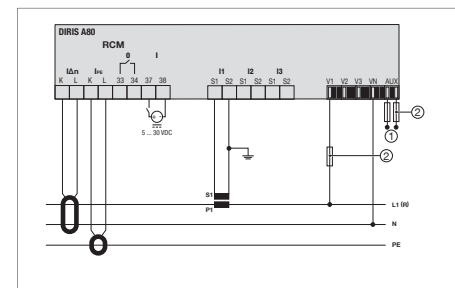


Version with 2 outputs - ref. 48250213

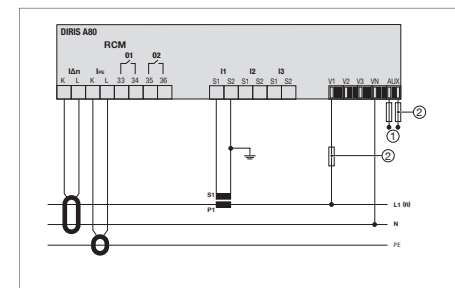


F Réseau triphasé déséquilibré (4NBL)
GB Unbalanced three-phase network (4NBL)
D Dreiphasennetz mit ungleicher belastung (4NBL)
I Rete trifase non equilibrata (4NBL)
NL Onevenwichtig driefasennet (4NBL)
E Red trifásica desequilibrada (4NBL)
P Rede trifásica desequilibrada (4NBL)
CN 非平衡三相电网 (4NBL)

Version with 1 input and 1 output - ref. 48250214




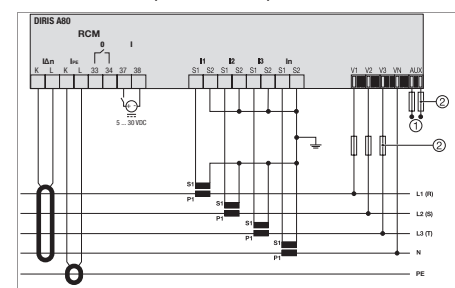


Version with 2 outputs - ref. 48250213

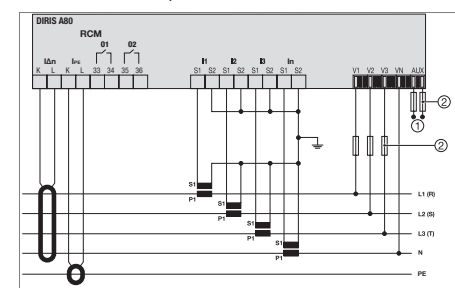

F ENTRER EN PROGRAMMATION CoDe 100

    - GB** Acces to programming mode
CoDe 100
- D** Zur Konfigurationsebene
CoDe 100
- I** Accesso alla programmazione
CoDe 100
- NL** Overgaan tot programmeermodus
CoDe 100
- E** Entrar en modo programación
CoDe 100
- P** Entrar em modo programação
CoDe 100
- CN** 进入设置模式
CoDe 100



F RÉSEAU Exemple : NET = 1BL

GB Network
Example: NET = 1BL

D Netzfrequenz
Beispiel: NET = 1BL

 
 
 
I Frequenza
Esempio: NET = 1BL

NL Netfrequentie
Voorbeeld: NET = 1BL

E Frequencia
Ejemplo: NET = 1BL

P Frequência
Exemplo: NET = 1BL

CN 电网
例如: NET = 1BL



F TENSION NOMINALE Exemple : 4NBL : U = 400V

GB NOMINAL VOLTAGE
Example: 4NBL : U = 400V

D NENNSPANNUNG
Beispiel: 4NBL : U = 400V

 
I TENSIONE NOMINALE
Esempio: 4NBL : U = 400V

NL NOMINALE SPANNING
Voorbeeld: 4NBL : U = 400V

E TENSÓN NOMINAL
Ejemplo: 4NBL : U = 400V

P TENSÃO NOMINAL
Exemplo: 4NBL : U = 400V

CN 额定电压
例如: 4NBL : U = 400V



F TRANSFORMATEURS DE COURANT Exemple : CT = 1500 / 5A

GB Current transformers
Example: CT = 1500 / 5A

D Phasenstromwandler
Beispiel: CT = 1500 / 5A

I Transformatore di corrente
Esempio: CT = 1500 / 5A

NL Stroomtransformator
Voorbeeld: CT = 1500 / 5A

E Transformador de corrente
Ejemplo: CT = 1500 / 5A

P Transformador de corrente
Exemplo: CT = 1500 / 5A

CN 电流互感器
例如: CT = 1500 / 5A

