


ATyS g

Automatic Transfer Switching Equipment





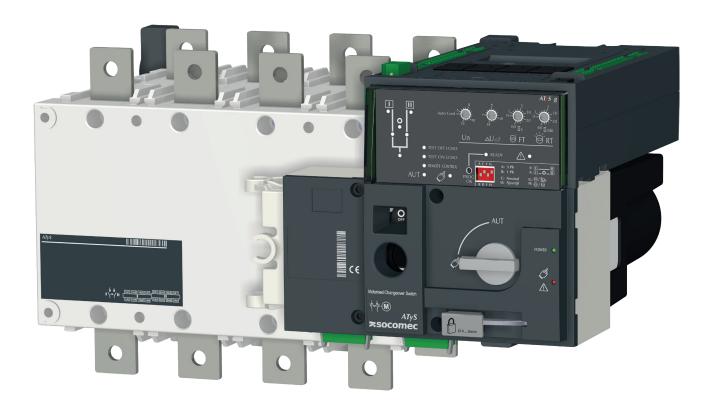

EN CONTENT

1. GENERAL SAFETY INSTRUCTIONS	6
2. INTRODUCTION	7
3. THE ATYS FAMILY PRODUCT RANGE	8
3.1. The ATyS Range Key Features	9
4. QUICK START	10
4.1. Quick Start ATyS g Frame B3 to B5 (125 A to 630 A)	10
4.2. Quick Start ATyS g Frame B3 to B5 (125 A to 630 A) continued	12
4.3. Quick Start ATyS g Frame B6 to B8 (800 A to 3200 A)	
4.4. Quick Start ATyS g Frame B6 to B8 (800 A to 3200 A) continued	16
5. GENERAL OVERVIEW	18
5.1. Product introduction	18
5.2. Product identification	
5.3. ATS control module interface	
5.4. Environmental	
5.4.1. IP Rating	
5.4.2. Operating Conditions	
5.4.2.1. Temperature	
5.4.2.2. Hygrometry	
5.4.3. Storage Conditions	
5.4.3.1. Temperature	
5.4.3.2. Storage duration period	
5.4.3.3. Storage position	
5.4.4. Volume and shipping weights by reference ATyS g	22
5.4.5. CE marking	23
5.4.6. Lead free process	23
5.4.7. WEEE	23
5.4.8. EMC standard	23
5.5. ATyS g ACCESSORIES AVAILABLE	24
6. INSTALLATION	26
6.1. Product dimensions	26
6.1.1. Dimensions: Frame B3 to B5 (125 A to 630 A)	26
6.1.2. Dimensions: Frame B6 & B7 (800 A to 1600 A)	28
6.1.3. Dimensions: Frame B8 (2000 A to 3200 A)	29
6.2. Mounting orientation	30
6.3. Assembly of customer mounted accessories	30
6.3.1. Clip for emergency handle storage	30
6.3.2. Bridging bar installation	31
6.3.3. Terminal shrouds	31
6.3.4. Terminal screens	32
6.3.5. Copper bar connection kits (2000A to 3200A : Frame B8)	33
6.3.6. Incoming copper bar connection kit assembly	
6.3.7. Outgoing bridge connection assembly	
6.3.8. Power supply	
6.3.9. Padlocking key interlocks	
6.3.10. Additional auxiliary contacts	
6.4. ATyS g Optional module installation.	

7.	COI	NNECTIONS	.37
	7.1.	Power circuits	.37
		7.1.1. Cable or bar connections	.37
		7.1.2. Power connection terminals	.37
		7.1.3. Power connection cross-section	.37
		7.1.4. Connection	.38
	7.2.	Networks and Power Connection possibilities	.39
		7.2.1. Type of networks	.39
		7.2.2. Sensing details	.40
	7.3.	Control circuits	.41
		7.3.1. Typical ATyS g wiring	.41
		7.3.2. ATyS g input and output contacts	.42
		7.3.2.1. Motorisation module wiring	
		7.3.2.2. ATS control module wiring	.42
		7.3.2.3. Terminal denomination, description and characteristics	
	7.4.	Voltage sensing and power supply kit	.45
		7.4.1. Standard configuration	.45
		7.4.2. Sensing kit wiring diagram (standard)	.46
		7.4.3. Network	.47
8.	ATY	S G OPERATING MODES AND SEQUENCES	.48
	8.1.	Manual Operation	.49
		8.1.1. Emergency manual operation	.49
		8.1.2. Padlocking	.49
	8.2.	Electrical operation	.50
		8.2.1. Dual power supply	.50
		8.2.2. Voltage sensing inputs	.50
		8.2.3. Fixed inputs	
		8.2.3.1. Description	.51
		8.2.3.2. Technical data	.52
		8.2.3.3. Remote control logic	.52
		8.2.4. Fixed outputs - Dry contacts	
		8.2.4.1. Description	
		8.2.4.2. Position auxiliary contact	
		8.2.4.3. ATyS g Product available output (motorisation)	
		8.2.5. Specific compressors control - DTC Function	
	8.3	Operating Sequences	
		Programming	
	O.⊣.	8.4.1. Step 1: ATyS g Dip Switch Setting Options	
		8.4.2. Step 2: ATyS g Potentiometer Setting Options	
		8.4.2.1. Chronograms in Mains-Genset Application	
		8.4.2.2. Chronograms in Mains-Mains Application	
		8.4.3. Step 3: ATyS g Auto Configuration	
		8.4.4. Step 4: Saving the configured values	
		8.4.5. Step 5: Putting the ATyS g into auto operation	
O	CO^{\dagger}	MMUNICATION	
∌.		General information	
		MODBUS® protocol	
	٠.۷	MODDOO® PLOTOOOL	. 02

EN CONTENT

10. CHARACTERISTICS	64
11. PREVENTIVE MAINTENANCE AND ROUTINE ANNUAL INSPECTION	66
12. TROUBLE SHOOTING GUIDE	67
13. ACCESSORIES	68
13.1. Terminal shrouds	
13.2. Terminal screens	68
13.3. Bridging bars	69
13.4. Copper bar connection kits	69
13.5. Solid neutral	70
13.6. Autotransformer 400/230 VAC	70
13.7. DC power supply	
13.8. Voltage sensing and power supply kit	
13.9. Voltage relay	
13.10. Door protective surround	
13.11. Auxiliary contacts (additional)	
13.12. 3 position padlocking (I - 0 - II)	
13.13. RONIS Key interlocking system	
13.14. Plug_in optional module	
13.15. Remote interface. 13.16. Connection cable for remote interface.	
13.17. Sealable cover	
13.18. Auto/Manual key selector	
·	
14.1 Flootraria madula	
14.1. Electronic module 14.2. Motorisation module	
14.3. Power section.	
14.4. Kit of connectors.	
14.5. Metal mounting brackets.	
15. ATYS FAMILY: ORDERING INFORMATION	
ANNEXE I. MODBUS© COMMUNICATION ADDRESS AND DESIGNATION DETAILS	
Annexe I - 1. Input/Output state	
Annexe I - 2. Hour/Date setting	
Annexe I - 3. Action system	
Annexe I - 4. Status	
Annexe I - 6. Timers state	
Annexe I - 7. Commands	
Annexe I - 8. User commands	
Annexe I - 9. Setup threshold for upstream Voltages	
Annexe I - 10. Setup Input/Output	
Annexe I - 11. Setup network	
Annexe I - 12. Communication settings	
Annexe I - 13. Product counters	

ATYS g - 541998E - SOCOMEC EN 5

1. GENERAL SAFETY INSTRUCTIONS

- This manual provides instructions on safety, connections and operation of the ATyS g motorised changeover switch manufactured by SOCOMEC.
- Whether the ATyS g is sold as a loose product, as a spare, as an enclosed solution or as any other configuration, this device must always be installed and commissioned by qualified and experienced personnel, in line with the manufacturers recommendations, following good engineering practices and after having read and understood the details in the latest release of the relative product instruction manual.
- Maintenance on the product and any other associated equipment including but not limited to servicing operations must be performed by adequately trained and qualified personnel.
- Each product is shipped with a label or other form of marking including rating and other important specific product information. One must also refer to and respect markings on the product prior to installation and commissioning for values and limits specific to that product.
- Using the product outside the intended scope, outside SOCOMEC recommendations or outside the specified ratings and limits can cause personal injury and/or damage to equipment.
- This instruction manual must be made accessible so as to be easily available to anyone who may need to read it in relation with the ATyS g.
- The ATyS g meets the European Directives governing this type of product and includes CE marking on each product.
- No covers on the ATyS g should be opened (with or without voltage) as there may still be dangerous voltages inside the product such as those from external circuits.
- Do not handle any control or power cables connected to the ATyS g when voltage may be present on the product directly through the mains or indirectly through external circuits.
- Voltages associated with this product may cause injury, electric shock, burns or death. Prior to carry out any maintenance
 or other work on live parts or other parts in the vicinity of exposed live parts, ensure that the switch including all control
 and associated circuits are de-energized.



- As a minimum the ATyS g comply with the following international standards:
 - IEC 60947-6-1
 - GB 14048-11
 - EN 60947-6-1
 - VDE 0660-107
 - BS EN 60947-6-1
 - NBN EN 60947-6-1

- IEC 60947-3
- IS 13947-3
- EN 60947-3
- NBN EN 60947-3
- BS EN 60947-3

The information provided in this instruction manual is subject to change without notice, remains for general information only and is non-contractual.

2. INTRODUCTION

ATyS g "Automatic Transfer Switching Equipment" (ATSE) is designed for use in power systems for the safe transfer of a load supply between a normal and an alternate source. The changeover is done in open transition and with minimum supply interruption during transfer ensuring full compliance with IEC 60947-6-1, GB 14048-11 and other international TSE standards as listed.

The ATyS g is a full load break (switch type) derived transfer switching equipment where the main components are proven technology devices also fulfilling requirements in IEC 60947-3 standards.

As a Class PC ATSE, the ATyS g is capable of "making and withstanding short circuit currents" assigned to IEC 60947-3 utilization categories of up to AC23A, GB 14048-11, IEC 60947-6-1 and equivalent standards with utilization categories of up to AC33B.

ATyS g motorised source changeover switches ensure:

- Power Control and Safety between a normal and an alternate source.
- A complete product delivered as a fully assembled and tested solution.
- Intuitive HMI for emergency / local operation.
- Integrated and robust switch disconnection.
- Window with clearly visible position indication I − 0 II.
- An inherent failsafe mechanical interlock.
- Stable positions (I 0 II) non affected by typical vibration and shocks.
- Constant pressure on the contacts non effected by network voltage.
- Energy Efficient with virtually no consumption whilst on the normal, alternate or off positions.
- Quick, easy and safe dual "on-load" emergency manual operation. (Manual operation is functional with and without the motorization in place).
- Extremely rugged, error free and built in padlocking facility.
- Straight forward installation with effective ergonomics.
- Minimal downtime with the possibility to perform easy maintenance.
- Simple and secure motorization controls interface with remote control.
- Straightforward ATS configuration for easy and fast commissioning.
- Integrated switch position auxiliary contacts.
- Dual active "product availability" status feedback for motorisation and ATS controllers.
- Ample accessories to suit specific requirements.
- Fully integrated ATS controller designed for Mains / Mains and Mains / Genset Applications.



• Power supply continuity for most mains / genset network applications...

ATYS g - 541998E - SOCOMEC EN 7

3. THE ATYS FAMILY PRODUCT RANGE

The ATyS g has been engineered by the SOCOMEC centre of excellence in France who boasts it's very own in-house 100MVA instantaneous power test lab accredited by COFRAC and working in partnership with: KEMA, CEBEC, UL, CSA, ASTA, Lloyd's Register of Shipping, Bureau Véritas, BBJ-SEP, EZU, GOST-R... and others.

SOCOMEC has been manufacturing power control and safety products since 1922. The first generation SOCOMEC "motorised changeover switches" were introduced in 1990 and today the ATyS brand has become trusted by major players in the power industry worldwide.


The ATyS Family includes a complete range of remotely operated transfer switch equipment (RTSE) as well as automatic fully integrated products and solutions (ATSE). Selecting the right ATyS will depend on the application as well as the nature of installation in which the ATyS will be installed.

This instruction manual includes details and instructions specific to the "ATyS g" ATSE only. For all other ATyS family of products please refer to the specific instruction manual related to that product. (Available for download on www.socomec.com)

An overview of the complete ATyS range is presented below:

(The encircled device is the product detailed in this instruction manual).

Just the right ATyS for your application...

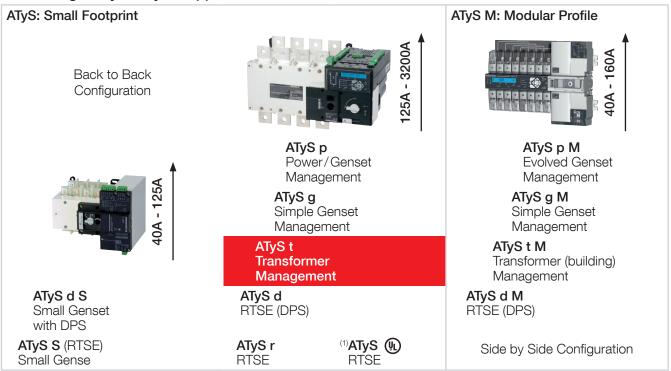

⁽¹⁾ The UL version of ATyS r is available from 100 - 400A

3.1. The ATyS Range Key Features

Selecting the right ATyS will depend on the application, the functionality required as well as the nature of the installation in which the ATyS will be installed. Below is an outline product selection chart listing the key features of each product to help to select the right ATyS for your needs.

Motorised Changeover with control driven by dry contacts Manual Emergency Operation with external handle Wide band AC control voltage supply Wide band DC control voltage supply Watchdog relay to ensure product availability Ratings from 40 – 125 A as indicated or 125 A - 3200 A for • Override controls and force switch to zero (off) position Integrated position auxiliary contacts (I - O - II) Source availability LED display Remote Display module RJ45 connection for D10 Integrated Dual power supply Network - Network Applications Genset - Genset Applications Genset - Genset Applications Pre-defined fixed I/O Programmable I/O Motorised Changeover with control driven by dry contacts • • • • • • • • • • • • • • • • • • •	IEC 60947-6-1	ATyS S	ATyS Sd	ATyS r	ATyS d	ATyS t	ATyS g	ATyS p
Montal Emergency Operation with external handle		711/00	711/3 54	-	711/3 4	711/51	711/38	711/3 p
Manual Emergency Operation with external handle	Motorised Changeover with control driven by dry contacts	•	•	•	•	•	•	•
Wide band AC control voltage supply •	, ,	•	•	•	•		•	•
Wide band DC control voltage supply • Image: Control voltage supply Im		•	•	•	•	•	•	•
Matchdog relay to ensure product availability		•						
Retings from 40 – 125 A as indicated or 125 A ~ 3200 A for • 40								
Override controls and force switch to zero (off) position Integrated position auxiliary contacts (I - O - II) Source availability LED display Remote Display module RJ45 connection for D10 Integrated Dual power supply Network - Network Applications Network - Genset Applications Network - Genset Applications Over a case of the sense Applications Pre-defined fixed I/O Programmable I/O Remote Display module RJ45 connection for D10 Integrated Dual power supply Network - Network Applications Over a case of the sense of the se		40 -		UL 100		•		•
Integrated position auxiliary contacts (I - O - II) Source availability LED displays Remote Display module RJ45 connection for D10 Integrated Dual power supply Network - Network Applications Network - Genset Applications Network - Genset Applications Pre-defined fived IVO Programmable IVO Additional progremmable IVO modules (Optional) up to 4 modules) Remoteby operated Transfer Switching Equipment (RTSE Class PC) Auto-matic Transfer Switching Equipment (RTSE Class PC) Auto-matic Transfer Switching Equipment (ATSE Class PC) Auto-matic Transfer Switching Equipment (ATSE Class PC) Auto-matic Transfer Switching Equipment (ATSE Class PC) Auto-Remote + Manual Control Auto - Remote + Monual Control Auto - Remote + Monual Control Auto - Remote + Local - Manual Control		125 A	125 A	- 400 A				
Source availability LED display Remote Display module RJ45 connection for D10 Integrated Dual power supply Network - Network Applications Network - Genset A								
Remote Display module RJ45 connection for D10						_		
Integrated Dual power supply						_		
Network - Network Applications					•			
Network - Genset Applications Genset - Genset Applications Pre-defined fixed I/O Programmable I/O Additional programmable I/O modules (Optional up to 4 modules) Remotely operated Transfer Switching Equipment (RTSE Class PC) Automatic Transfer Switching Equipment (RTSE Class PC) Automatic Transfer Switching Equipment (ATSE Class PC) Remotel + Manual Control Auto + Remote + Manual Control Auto - Remote						•	•	
Censet - Genset Applications	**	•	•	•	•	•	_	•
Pre-defined fixed I/O Programmable I/O modules (Optional up to 4 modules)	• •	•	•	•	•		•	•
Programmable I/O Additional programmable I/O modules (Optional up to 4 modules) Remotely operated Transfer Switching Equipment (RTSE Class PC) Automatic Transfer Switching Equipment (RTSE Class PC) Automatic Transfer Switching Equipment (ATSE Class PC) Autor + Remote + Manual Control Auto + Remote + Manual Control Auto + Remote + Local + Manual Control Auto + Remote + Local + Manual Control Auto-configuration of voltage and frequency levels Switch Position LED display Security Sealing Cover Configuration through potentiometers and dip switches Test on load functionality Test off load functionality Programmable configuration with keypad and LCD display Metering & Measurement: kVi; kVar; kVA + kWh; kVarh; kVAh Communication RS485 Ethemet + Ethernet gateway (Optional) Easy Configuration software (Through Ethernet/Modbus) Remote Terminal Unit RJ45 connection for D20 Data Logger for Event Recording with RTC (Through Ethernet/Modbus) Programmable Engine Exerciser functionality (Through Ethernet/Modbus) Multi level password access Load Shedding function Capacity Management functionality Peak shaving functional peak of the shaving functional peak of the shaving functional peak of the shaving function peak of the shaving functional peak of the shaving functional peak of the shav		•	•	•	•			
Additional programmable I/O modules (Optional up to 4 modules) Remotely operated Transfer Switching Equipment (RTSE Class PC) Automatic Transfer Switching Equipment (ATSE Class PC) Remotel + Manual Control Auto + Remote + Manual Control Auto + Remote + Local + Manual Control Auto + Remote + Local + Manual Control Auto - Remote + Local + Manual Control Auto-configuration of voltage and frequency levels Switch Position LED display Security Sealing Cover Configuration through potentiometers and dip switches Test on load functionality Test off load functionality Programmable configuration with keypad and LCD display Metering & Measurement: kW; kVar; kVA + kWh; kVarh; kVAh Communication RS485 Ethernet + Ethernet gateway (Optional) Webserver Access through optional Ethernet module (Optional) Easy Configuration software (Through Ethernet/Modbus) Remote Terminal Unit RJ45 connection for D20 Data Logger for Event Recording with RTC (Through Ethernet/Modbus) Multi level password access Load Shedding function Cepacity Management functionality Peak shaving functionality Remote + Manual Control **Optional States** **Optional States				• 5/1	• 5/1	• 9/2	• 11/3	
Remotely operated Transfer Switching Equipment (RTSE Class PC) Automatic Transfer Switching Equipment (ATSE Class PC) Remote + Manual Control Auto - Remote + Manual Control Auto - Remote + Local + Manual Control Auto - Remote + Local + Manual Control Auto - Remote + Local + Manual Control Auto - Switch Position LED display Security Sealing Cover Configuration through potentiometers and dip switches Test on load functionality Test off load functionality Programmable configuration with keypad and LCD display Metering & Measurement: kW; kVar; kVA + kWh; kVarh; kVAh Communication RS485 Ethernet + Ethernet gateway (Optional) Webserver Access through optional Ethernet module (Optional) Easy Configuration software (Through Ethernet/Modbus) Remote Terminal Unit RJ45 connection for D20 Data Logger for Event Recording with RTC (Through Ethernet/Modbus) Multi level password access Load Shedding function Capacity Management functionality Peak shaving functionality Remote + Manual Control **Optional Ethernet (Through Ethernet/Modbus) **Optional Ethernet (Through Ethernet/Modbus) **Optional Ethernet (Through Ethernet/Modbus) **Optional Explain Exerciser functionality (Through Ethernet/Modbus) **Optional Explain Exercise functionality (Throug								• 6/1
Automatic Transfer Switching Equipment (ATSE Class PC) Remote + Manual Control Auto + Remote + Manual Control Auto + Remote + Local + Manual Control Auto + Remote + Local + Manual Control Auto - Configuration of voltage and frequency levels Switch Position LED display Security Sealing Cover Configuration through potentiometers and dip switches Test on load functionality Test on load functionality Programmable configuration with keypad and LCD display Metering & Measurement: kW; kVar; kVA + kWh; kVarh; kVAh Communication RS485 Ethernet + Ethernet gateway (Optional) Webserver Access through optional Ethernet module (Optional) Easy Configuration software (Through Ethernet/Modbus) Remote Terminal Unit RJ45 connection for D20 Data Logger for Event Recording with RTC (Through Ethernet/Modbus) Programmable Engine Exerciser functionality (Through Ethernet/Modbus) Multi level password access Load Shedding function Capacity Management functionality Peak shaving functionality Peak shaving functionality								• 8/8
Remote + Manual Control Auto + Remote + Manual Control Auto + Remote + Local + Manual Control Auto - Remote + Local + Manual Control Auto-configuration of voltage and frequency levels Switch Position LED display Security Sealing Cover Configuration through potentiometers and dip switches Test on load functionality Test off load functionality Programmable configuration with keypad and LCD display Metering & Measurement: kW; kVar; kVA + kWh; kVarh; kVAh Communication RS485 Ethernet + Ethernet gateway (Optional) Webserver Access through optional Ethernet module (Optional) Easy Configuration software (Through Ethernet/Modbus) Remote Terminal Unit RJ45 connection for D20 Data Logger for Event Recording with RTC (Through Ethernet/Modbus) Multi level password access Load Shedding function Capacity Management functionality Peak shaving functionality Reserved Terminal Unit respective functionality (Through Ethernet/Modbus) Repeak shaving functionality Peak shaving functionality Reserved Terminal Unit respective functionality (Through Ethernet/Modbus) Repeak shaving functionality Reak shaving functionality Reserved Terminal Unit respective functionality Reak shaving functionality Reak shaving functionality Reak shaving functionality Reserved Terminal Unit respective functionality Reak shaving functionality Reak shaving functionality Reak shaving functionality		•	•	•	•			
Auto + Remote + Manual Control	Automatic Transfer Switching Equipment (ATSE Class PC)					•	•	•
Auto + Remote + Local + Manual Control Auto-configuration of voltage and frequency levels Switch Position LED display Security Sealing Cover Configuration through potentiometers and dip switches Test on load functionality Test off load functionality Programmable configuration with keypad and LCD display Metering & Measurement: kW; kVar; kVA + kWh; kVarh; kVAh Communication RS485 Ethernet + Ethernet gateway (Optional) Webserver Access through optional Ethernet module (Optional) Easy Configuration software (Through Ethernet/Modbus) Remote Terminal Unit RJ45 connection for D20 Data Logger for Event Recording with RTC (Through Ethernet/Modbus) Multi level password access Load Shedding function Capacity Management functionality Peak shaving functionality Peak shaving functionality Peak shaving functionality Peak shaving functionality Picklich Position Additional Page Page Page Page Page Page Page Page	Remote + Manual Control	•	•	•	•			
Auto-configuration of voltage and frequency levels Switch Position LED display Security Sealing Cover Configuration through potentiometers and dip switches Test on load functionality Test off load functionality Programmable configuration with keypad and LCD display Metering & Measurement: kW; kVar; kVA + kWh; kVarh; kVAh Communication RS485 Ethernet + Ethernet gateway (Optional) Webserver Access through optional Ethernet module (Optional) Easy Configuration software (Through Ethernet/Modbus) Remote Terminal Unit RJ45 connection for D20 Data Logger for Event Recording with RTC (Through Ethernet/Modbus) Multi level password access Load Shedding function Capacity Management functionality Peak shaving functionality **Optional** **Opt	Auto + Remote + Manual Control					•	•	
Switch Position LED display Security Sealing Cover Configuration through potentiometers and dip switches Test on load functionality Test off load functionality Programmable configuration with keypad and LCD display Metering & Measurement: kW; kVar; kVA + kWh; kVarh; kVAh Communication RS485 Ethernet + Ethernet gateway (Optional) Webserver Access through optional Ethernet module (Optional) Easy Configuration software (Through Ethernet/Modbus) Remote Terminal Unit RJ45 connection for D20 Data Logger for Event Recording with RTC (Through Ethernet/Modbus) Multi level password access Load Shedding function Capacity Management functionality Peak shaving functionality **Optional Shedding function and size of the content o	Auto + Remote + Local + Manual Control							•
Security Sealing Cover Configuration through potentiometers and dip switches Test on load functionality Test off load functionality Programmable configuration with keypad and LCD display Metering & Measurement: kW; kVar; kVA + kWh; kVarh; kVAh Communication RS485 Ethernet + Ethernet gateway (Optional) Webserver Access through optional Ethernet module (Optional) Easy Configuration software (Through Ethernet/Modbus) Remote Terminal Unit RJ45 connection for D20 Data Logger for Event Recording with RTC (Through Ethernet/Modbus) Multi level password access Load Shedding function Capacity Management functionality Peak shaving functionality **Optional Switches**	Auto-configuration of voltage and frequency levels					•	•	•
Configuration through potentiometers and dip switches Test on load functionality Test off load functionality Programmable configuration with keypad and LCD display Metering & Measurement: kW; kVar; kVA + kWh; kVarh; kVAh Communication RS485 Ethernet + Ethernet gateway (Optional) Webserver Access through optional Ethernet module (Optional) Easy Configuration software (Through Ethernet/Modbus) Remote Terminal Unit RJ45 connection for D20 Data Logger for Event Recording with RTC (Through Ethernet/Modbus) Programmable Engine Exerciser functionality (Through Ethernet/Modbus) Multi level password access Load Shedding function Capacity Management functionality Peak shaving functionality * • • • • • • • • • • • •	Switch Position LED display					•	•	•
Test on load functionality Test off load functionality Programmable configuration with keypad and LCD display Metering & Measurement: kW; kVar; kVA + kWh; kVarh; kVAh Communication RS485 Ethernet + Ethernet gateway (Optional) Webserver Access through optional Ethernet module (Optional) Easy Configuration software (Through Ethernet/Modbus) Remote Terminal Unit RJ45 connection for D20 Data Logger for Event Recording with RTC (Through Ethernet/Modbus) Programmable Engine Exerciser functionality (Through Ethernet/Modbus) Multi level password access Load Shedding function Capacity Management functionality Peak shaving functionality • • • • • • • • • • • • • • • • • • •	Security Sealing Cover					•	•	
Test off load functionality Programmable configuration with keypad and LCD display Metering & Measurement: kW; kVar; kVA + kWh; kVarh; kVAh Communication RS485 Ethernet + Ethernet gateway (Optional) Webserver Access through optional Ethernet module (Optional) Easy Configuration software (Through Ethernet/Modbus) Remote Terminal Unit RJ45 connection for D20 Data Logger for Event Recording with RTC (Through Ethernet/Modbus) Programmable Engine Exerciser functionality (Through Ethernet/Modbus) Multi level password access Load Shedding function Capacity Management functionality Peak shaving functionality • • • • • • • • • • • • • • • • • • •	Configuration through potentiometers and dip switches					•	•	
Programmable configuration with keypad and LCD display Metering & Measurement: kW; kVar; kVA + kWh; kVarh; kVAh Communication RS485 Ethernet + Ethernet gateway (Optional) Webserver Access through optional Ethernet module (Optional) Easy Configuration software (Through Ethernet/Modbus) Remote Terminal Unit RJ45 connection for D20 Data Logger for Event Recording with RTC (Through Ethernet/Modbus) Programmable Engine Exerciser functionality (Through Ethernet/Modbus) Multi level password access Load Shedding function Capacity Management functionality Peak shaving functionality •	Test on load functionality						•	•
Metering & Measurement: kW; kVar; kVA + kWh; kVarh; kVAh ● Communication RS485 ● Ethernet + Ethernet gateway (Optional) ● Webserver Access through optional Ethernet module (Optional) ● Easy Configuration software (Through Ethernet/Modbus) ● Remote Terminal Unit RJ45 connection for D20 ● Data Logger for Event Recording with RTC (Through Ethernet/Modbus) ● Programmable Engine Exerciser functionality (Through Ethernet/Modbus) ● Multi level password access ● Load Shedding function ● Capacity Management functionality ● Peak shaving functionality ●	Test off load functionality						•	•
Communication RS485 Ethernet + Ethernet gateway (Optional) Webserver Access through optional Ethernet module (Optional) Easy Configuration software (Through Ethernet/Modbus) Remote Terminal Unit RJ45 connection for D20 Data Logger for Event Recording with RTC (Through Ethernet/Modbus) Programmable Engine Exerciser functionality (Through Ethernet/Modbus) Multi level password access Load Shedding function Capacity Management functionality Peak shaving functionality • • • • • • • • • • • • •	Programmable configuration with keypad and LCD display							•
Ethernet + Ethernet gateway (Optional) Webserver Access through optional Ethernet module (Optional) Easy Configuration software (Through Ethernet/Modbus) Remote Terminal Unit RJ45 connection for D20 Data Logger for Event Recording with RTC (Through Ethernet/Modbus) Programmable Engine Exerciser functionality (Through Ethernet/Modbus) Multi level password access Load Shedding function Capacity Management functionality Peak shaving functionality •	Metering & Measurement: kW; kVar; kVA + kWh; kVarh; kVAh							•
Webserver Access through optional Ethernet module (Optional) Easy Configuration software (Through Ethernet/Modbus) Remote Terminal Unit RJ45 connection for D20 Data Logger for Event Recording with RTC (Through Ethernet/Modbus) Programmable Engine Exerciser functionality (Through Ethernet/Modbus) Multi level password access Load Shedding function Capacity Management functionality Peak shaving functionality Peak shaving functionality	Communication RS485						•	•
Easy Configuration software (Through Ethernet/Modbus) Remote Terminal Unit RJ45 connection for D20 Data Logger for Event Recording with RTC (Through Ethernet/Modbus) Programmable Engine Exerciser functionality (Through Ethernet/Modbus) Multi level password access Load Shedding function Capacity Management functionality Peak shaving functionality •	Ethernet + Ethernet gateway (Optional)							•
Remote Terminal Unit RJ45 connection for D20 Data Logger for Event Recording with RTC (Through Ethernet/Modbus) Programmable Engine Exerciser functionality (Through Ethernet/Modbus) Multi level password access Load Shedding function Capacity Management functionality Peak shaving functionality •	Webserver Access through optional Ethernet module (Optional)							•
Data Logger for Event Recording with RTC (Through Ethernet/Modbus) Programmable Engine Exerciser functionality (Through Ethernet/Modbus) Multi level password access Load Shedding function Capacity Management functionality Peak shaving functionality •	Easy Configuration software (Through Ethernet/Modbus)							•
Programmable Engine Exerciser functionality (Through Ethernet/Modbus) Multi level password access Load Shedding function Capacity Management functionality Peak shaving functionality •	Remote Terminal Unit RJ45 connection for D20							•
Multi level password access Load Shedding function Capacity Management functionality Peak shaving functionality •	Data Logger for Event Recording with RTC (Through Ethernet/Modbus)							•
Load Shedding function Capacity Management functionality Peak shaving functionality • •	Programmable Engine Exerciser functionality (Through Ethernet/Modbus)							•
Capacity Management functionality Peak shaving functionality •	Multi level password access							•
Peak shaving functionality	Load Shedding function							•
Peak shaving functionality	Capacity Management functionality							•
								•
								•
KWh Pulsed output module (Optional)								•
Counters KWh, permutation								•
LCD display for programming, metering, timers and counters								•
Possibility to add optional functionality								•

ATYS g - 541998E - SOCOMEC **EN 9**

4.1. Quick Start ATyS g Frame B3 to B5 (125 A to 630 A)

≯socomec





125 A - 630 A

Motorised Source Changeover Switch Automatic Transfer Switching Equipment

Preliminary operations

Check the following upon delivery and after removal of the packaging:

Packaging and contents are in good condition

- The product reference corresponds to the order
 Contents should include:

Qty 1 x ATyS g

Qtv 1 x Emergency handle and fixing clip Quick Start Guide instruction sheet

Risk of electrocution, burns or injury to persons and / or damage to equipment.

This Quick Start is intended for personnel trained in the installation and commissioning of this product. For further details refer to the product instruction manual available on the SOCOMEC website.

- This product must always be installed and commissioned by qualified and approved personnel.

 Maintenance and servicing operations should be
- performed by trained and authorised personnel.

 Do not handle any control or power cables connected to the product when voltage may be, or may become present on the product, directly through the mains or indirectly through external circuits.
- Always use an appropriate voltage detection device to confirm the absence of voltage.

 • Ensure that no metal objects are allowed to fall in
- the cabinet (risk of electrical arcing).
- For 125 160 A (Uimp = 8 kV). Terminations must respect a minimum of 8 mm clearance from live parts to parts intended to be earthed and between poles.
- For 200 630 A (Uimp = 12 kV). Terminations must respect a minimum of 14 mm clearance from live parts to parts intended to be earthed and between

Failure to observe good enginering practises as well as to follow these safety instructions may expose the user and others to serious injury or death

Risk of damaging the device In case the product is dropped or damaged in any way it is recommended to replace the complete product.

Accessories

- Bridging bars and connection kits.
 Control voltage transformer (400 VAC → 230 VAC).
- DC power supply (12/24 VDC → 230 VAC).
 Phase barriers.
- Terminal shrouds.

- Terminal screens.
 Auxiliary contacts (Additional).
 Padlocking in 3 positions (I O II).
 Lockout accessories (RONIS EL 11 AP).
 Door escutcheon frame.
 ATyS D10 Interface (remote display).

- Voltage sensing kit.Sealable cover.

- RJ45 cable for ATyS D10.
 Plug-in optional Modbus RS485 communication module.

For further details refer to the product instruction manual under chapter "Spares and Accessories"



www.socomec.com
To download, brochures, catalogues and technical manuals:
https://www.socomec.com/
range-automatic-transfer-switches_en.html?product=/atys-t-atys-g_en.html

QUICK START GUIDE EN

Installation and Commissioning

STEP 2 STEP 1 STEP 3 Plate Installation Connections connections

Clip for

storage of the

emergency handle


COMMAND / CONTROL terminal


STEP 4 Power SUPPLY and ATS Controller **Terminal Connections** STEP 5 CHECK

STEP 6 **PROGRAMMING**

Padlocking Mode



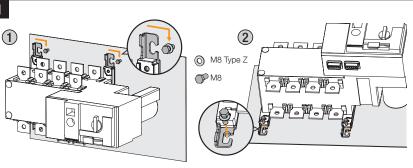

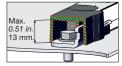


(3) Mounting


Caution: ensure that the product is installed on a flat rigid surface.







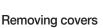


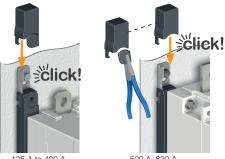




125 A to 400 A. 500 A. 630 A.

2 Power Terminal Connections										
To be connected using terminal lugs, rigid or flexable busbars.	F	RAME B	3	F	RAME B	FRAN	ΛE B5			
novable bassais.	125 A	160 A	200 A	250 A	315 A	400 A	500 A	630 A		
Minimum cable section Cu (mm²)	35	35	50	95	120	185	2x95	2x120		
Recommended Cu busbar cross-section (mm²)	-	-	-	-	-	-	2x32x5	2x40x5		
Maximum Cu cable cross-section (mm²)	50	95	120	150	240	240	2x185	2x300		
Maximum Cu busbar width (mm)	25	25	25	32	32	32	50	50		
Type of screw	M8	M8	M8	M10	M10	M10	M12	M12		
Recommended tightening torque (lb.in/N.m)	73.46/8.3	73.46/8.3	73.46/8.3	177.02 /20	177.02/20	177.02/20	354.04/40	354.04/40		
Maximum tightening torque (lb.in/N.m)	115.06/13	115.06/13	115.06/13	230.13/26	230.13/26	230.13/26	398.30/45	398.30/45		

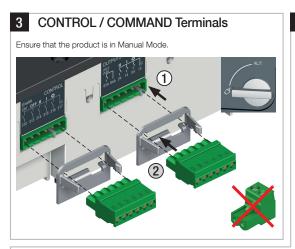





Example: Control wiring for a 400 VAC application having a 3 phase and neutral supply.

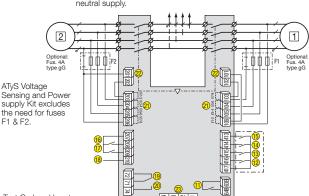

- 1 preferred source alternate source
- 1. Position 0 order
- 2. Position 1 order
- 3. Position 2 order
- 4. Zero position priority order
- 5. Remote Control Enable (Priority over Auto)
- 6. Product Available output (Motor)
- 7. Position II aux contact 8. Position I aux contact
- 9. Position 0 aux contact
- 10. O/P to ATyS D10 remote display

 11. Product Available output (ATS)
- 12. I/P Inhibition of the ATS controls 13. I/P Manual retransfer
- 14. M-M : activation of the DTC function
 M-G: S2 Stability Time Bypass: 2AT
- 15. M-G: Priority to TON / M-M: Priority enable/disable
- 16. TEST OFF LOAD Signal: TOF 23. Option module slots 1 to 4
- 17. M-G: Test On Load Input (TON) /M-M: Priority source selection
- 18. Not used19. Contact "Start/Stop Genset : if S1 is not available the NC contact (71-72) is close
- 20. Contact "Start/Stop Genset" : if S1 is not available the NO contact (71-74) is open
- 21. Voltage Sensing Inputs
- 22. Power Supply Inputs

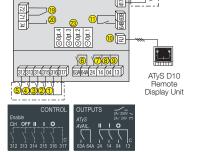

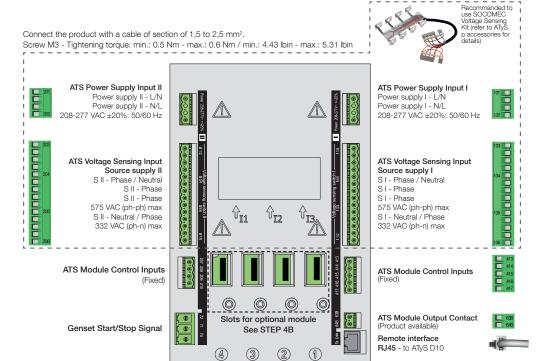

4B Optional Module


Communication between the software and the ATyS g may be done through the Modbus RTU module which is available as an option. The MODBUS module is to be installed in one of the slots provided in the ATyS g ATS control unit. Easy Config may be installed on a PC connected through MODBUS module for a direct ATyS configuration, either isolated with possibility to create a specific configuration for a later upload and use in ATyS.

Note: The ATyS g may accept 1 additional MODBUS communication module. Refer to the ATyS g accessory section for details.



Check

Whilst in manual mode, check the wiring and if ok power up the product.

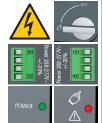

LED "Power" Green: ON LED Manuel/Fault Red: ON

ATYS g - 541998E - SOCOMEC EN 11

4.2. Quick Start ATyS g Frame B3 to B5 (125 A to 630 A) continued

6 Programming the ATyS g

The ATyS g is programmed after wiring verification tests through the front of the ATS Controller in 5 steps:



Note: Ensure that the ATvS a is in "Manual Mode" powered and with at least one network supply available.

WARNING!

As a safety measure the READY LED will flash when any of the settings shown on the controller are different to those that are saved. To return to the steady READY LED revert to the saved setting values or save the displayed value by pressing the PROG OK button briefly. (This is intended as a visual alarm in case one has changed the configuration settings but has not yet saved the new values in the product).

For added security the ATyS g may be equipped with a sealable cover so as to limit the access to configuration settings. Refer to the product accessory section for details.



Dip Switch Setting Options

SET the 4 Dip Switches using a small screw driver. Possible variants vary from positions "A to H" as described in the table below. For convenience, the position functions are also described on the front of the ATS controller adjacent to the dip

Note: The READY LED will flash green as soon as settings are changed and until the new settings have been saved by pressing the PROG OK button momentarily.





Dinauitab 1	Α	Three Phase Network
Dipswitch 1 A / B	В	Single Phase Network (Attn : Dipswitch 2 is inactive in this position)
Dipswitch 2	С	Three Phase 4 wire Network (Including Neutral) (Allows to detect a loss of neutral for unbalanced loads)
C/D	D	Three Phase 3 wire Network (Without Neutral)
Dipswitch 3	E	Load supply down time of 0 second (0DT = 0 sec)
E/F	F	Load supply down time of 2 seconds (0DT = 2 sec)
Dipswitch 4	G	Main - Generator Application
G/H	Н	Main - Main Application

Potentiometer Setting Options

SET the 4 potentiometers using a small screw driver paying attention to the arrow indicating the position. There are a total of 14 positions for which the specific settings are described in the table below.

Note: The READY LED will flash green as soon as settings are changed and until the new settings have been saved by pressing the PROG OK button momentarily.






2 Set Pot

WARNING! Whatever Pot 1 trimming, it is IMPERATIVE to set Pots 2 to 4.

	POTENTIOMETER	CONFIGURATION													
	Position	Auto Conf	1	2	3	4	5	6	7	8	9	10	11	12	13
Un	PP / PN	Mesured							220 / 127V						
	F	1	50Hz					60Hz							
	Position	1	2	3	4	5	6	7	8	9	10	11	12	13	14
ΔU/	U threshold in % of Un	5%	6%	7%	8%	9%	10%	11%	12%	13%	14%	15%	16%	18%	20%
ΔF	F threshold in % of Fn	3%	3%	4%	4%	5%	5%	6%	6%	7%	7%	8%	8%	9%	10%
	Hysteresis					2	0% of	ΔU/ Δ	F sett	ings					
FT	Source Failure Timer (s)	0	1	2	3	4	5	8	10	15	20	30	40	50	60
RT	Source Beturn Timer (min)	0	1	2	3	4	5	8	10	15	20	30	40	50	60



Auto Configuration of Mains Voltage and Frequency

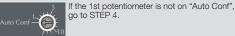


The ATyS g includes an "Auto Configuration" feature to detect the mains voltage

and frequency nominal values, phase rotation and neutral position and saves them in the ATS controller. Note: Before configuring the nominal values ensure that the product is properly wired, verified and ready for commissioning. It is imperative that the network supply is available and that the wiring to the ATyS g voltage sensing terminals 103 – 106 and 203 – 206 has been done. It is preferable to use the ATyS sensing kit

that may be provided as an accessory. Press and hold the Red "PROG OK" button for >2s to measure the mains voltage and frequency

Note: The source available LED will flash while the available network is being measured. The READY LED will flash green as soon as settings are measured and until these settings have been saved by pressing the PROG OK button a second time momentarily. (Refer to STEP 4).

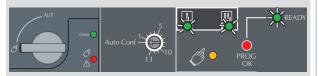




Saving the configured values

To SAVE the recorded setting configuration press the PROG OK button momentarily: <60ms

Note: The flashing READY LED goes off once the values are saved in the ATS

At least one of the source availability LED must be ON

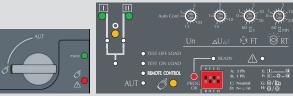




AUT 💥 Putting the ATyS g into Auto Operation

After following Steps 1 to 4, and once ready to put the ATyS g into AUTO operation turn the mode selector switch to Auto.

Note: When the product is powered and properly configured, after switching the product from Manual Mode to Auto Mode the READY light should be a steady green light

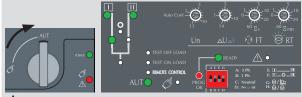

WARNING! Depending on the state of the ATyS g the ATS automation may change the switch position as soon as the mode selector is switched to AUT. This is a normal operation

- MANUAL Mode LED indication. (Yellow steady light when in Manual Mode).
- AUTO Mode LED indication
 Green steady light when in Auto
 mode with no timers running.
 Green flashing light when in Auto with timers running in the background.
- background.

 3. REMOTE CONTROL Mode LED indication. Yellow steady light when in remote control mode. Remote control mode is achieved with the Auto/Manu selector switched to Auto and terminals 312 closed with terminal 317. Remote control orders and received through closing 314 to 316 with 317.

 4. TEST ON LOAD CONTROI
- 4. TEST ON LOAD CONTROL
- 1. IEST ON LOAD CONTROL
 Mode LED indication, (Yellow
 steady light when in TON mode)
 5. TEST OFF LOAD CONTROL
 Mode LED indication, (Yellow
 steady light when in TOF mode).
- Switch 1 LED position indication.
 (Green when in position 1).
- 7. Source supply I availability LED indication. Green when supply I voltage is within the set limits).
- 8. Zero position LED indication. (Yellow when in position 0).

 9. Switch 2 LED position indication.
- (Green when in position 2).
- Source supply II availability LED indication.
 (Green when supply II voltage is

- within the set limits).
- Sealing screw location 1 for use with sealing cover (Available as an accessory)
- 12. Potentiometer 1 : Network Configuration. (Auto Configuration or refer to the
- Configuration or refer to the configuration guide sticker on the front of the ATyS g when using the predefined setting positions 1 to 13). Potentiometer 2 : Voltage and Frequency threshold settings. (Refer to the configuration guide sticker on the front of the ATyS g to set the V / Hz threshold. Positions 1 to 14). Potentiometer 3: Supply Setentioneter 3: Supply
- 14. Potentiometer 3: Supply FAILURE Time (FT) Adjustable from 0 to 60 seconds.
- Potentiometer 4: Supply RETURN Time (RT) Adjustable from 0 to 60 minutes.
- from 0 to 60 minutes.


 16. READY LED indication
 Green steady light: Product in
 AUTO, Watchdog OK, Product
 Available to changeover.
 Green flashing: Settings
 displayed not saved or have
 been changed since last saved.
 (Press PROG OK button in
 manual mode to save or reverted.) manual mode to save or revert to last saved settings).
- Sealing screw location 2 for use with the sealing cover.


 FAULT LED indication. (Red
- steady light in case of an ATS controller internal fault).

- Configuration dip switches:
 (4 dip switches with 2 positions in each A to H).
- In each A to H).


 PROG OK: Configuration save push button. (ATTN: Active in Manual Mode ONLY).

 Press briefly to confirm and save all set configuration settings. Hold pressed for 2 seconds
- Hold pressed for 2 seconds to set the network supply voltage and frequency by Auto Configuration. This is to be followed by pressing briefly to save the set value configured.
- Green LED Indication: Power 22. Red LED Indication: Product
- Unavailable / Manual Mode / Fault Condition 23. Auto / Manual mode selector switch (Key version available as an option)
- option)
 24. Padlocking facility
 (Up to 3 padlocks of dia. 4 –
 8mm)
 25. Emergency manual operation
 shaft location (Accessible only
 in manual mode)
- Switch position indication window:
 I (On switch I) O (Off) II (On switch II).

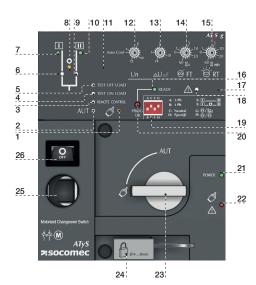

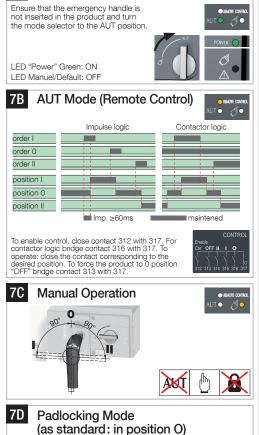

AUT Mode (Automatic Control)

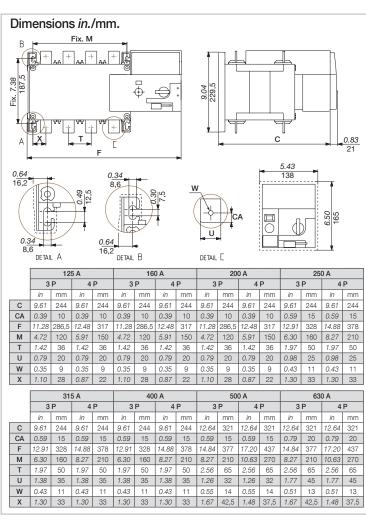

CORPORATE HQ CONTACT: SOCOMEC SAS 1-4 RUE DE WESTHOUSE - 67235 BENFELD, FRANCE - WWW.SOCOMEC.COM

AKIT

EN 13 ATYS g - 541998E - SOCOMEC

≯socomec





Motorised Source Changeover_Switch Automatic Transfer Switching Equipment

Preliminary operations

Check the following upon delivery and after removal

- of the packaging:

 Packaging and contents are in good condition

 The product reference corresponds to the order

 Contents should include:

Qty 1 x ATyS g

Qty 1 x Emergency handle and fixing clip Quick Start Guide instruction sheet

Warning

Risk of electrocution, burns or injury to persons and / or damage to equipment.

This Quick Start is intended for personnel trained in the installation and commissioning of this product. For further details refer to the product instruction manual available on the SOCOMEC website.

- · This product must always be installed and
- Inis product must always be installed and commissioned by qualified and approved personnel.
 Maintenance and servicing operations should be performed by trained and authorised personnel.
 Do not handle any control or power cables connected to the product when voltage may be,
- or may become present on the product, directly through the mains or indirectly through external circuits.
- Always use an appropriate voltage detection device to confirm the absence of voltage.

 Ensure that no metal objects are allowed to fall in
- the cabinet (risk of electrical arcing).
- For 800 3200 A (Uimp = 12 kV). Terminations must respect a minimum of 14 mm clearance from live parts to parts intended to be earthed and between

Failure to observe good enginering practises as well as to follow these safety instructions may expose the user and others to serious injury or death.



Risk of damaging the device In case the product is dropped or damaged in any way it is recommended to replace the complete product.

Accessories

- Bridging bars and connection kits.
 Control voltage transformer (400 VAC → 230 VAC).
- DC power supply (12/24 VDC → 230 VAC).
 Phase barriers.
- Terminal shrouds.

- I terminal snrouds.

 Auxiliary contacts (Additional).

 Auxiliary contacts (Additional).

 Padlocking in 3 positions (I O II).

 Lockout accessories (RONIS EL 11 AP).

 Door escutcheon frame.

 ATyS D10 Interface (remote display).
- Voltage sensing kit.
 Sealable cover.

- RJ45 cable for ATyS D10.
 Plug-in optional Modbus RS485 communication module.

For further details refer to the product instruction manual under chapter "Spares and Accessories".


QUICK START GUIDE EN


Padlocking Mode

Installation and Commissioning

000

000

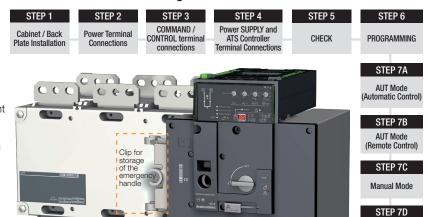


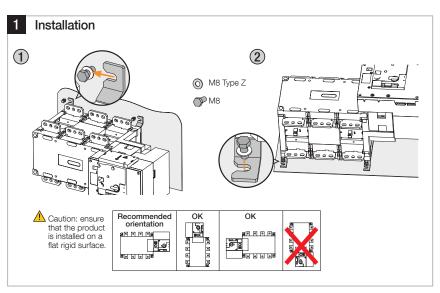



To be connected using terminal lugs, rigid or flexable bushars.	F	RAME B	6	FRAME B7 FRAME B8			3
busbais.	800 A	1000 A	1250 A	1600 A	2000 A	2500 A	3200 A
Minimum cable section Cu (mm²)	2x185	-	-	-	-	-	-
Recommended cable section Cu (mm²)	2x50x5	2x63x5	2x63x7	2x100x5	3x100x5	2x100x10	3x100x1
Maximum Cu cable cross-section (mm²)	4x185	4x185	4x185	6x185	-	-	-
Maximum Cu busbar width (mm)	63	63	63	100	100	100	100
Type of screw	M8	M8	M10	M12	M12	M12	M12
Recommended tightening torque (lb.in/N.m)	73.46/8.3	73.46/8.3	177.02/20	354.04/40	354.04/40	354.04/40	354.04/4
Maximum tightening torque (lb.in/N.m)	115.06/13	115.06/13	230.13/26	398.30/45	398.30/45	398.30/45	398.30/4




www.socomec.com
To download, brochures, catalogues
and technical manuals:
https://www.socomec.com/
range-automatic-transfer-r
en.html?product=/**

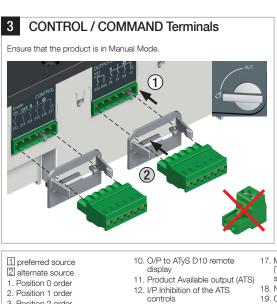


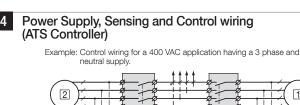

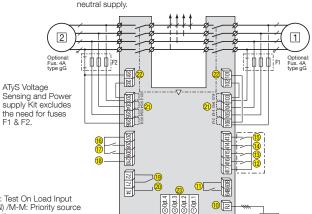

- 3. Position 2 order
- 4. Zero position priority order
- 5. Remote Control Enable (Priority over Auto)
- 6. Product Available output (Motor)
- 7. Position II aux contact 8 Position Laux contact
- 9. Position 0 aux contact
- 13. I/P Manual retransfer
- 14. M-M: activation of the DTC function M-G: S2 Stability Time
- Bypass: 2AT 15. M-G: Priority to TON / M-M:
- Priority enable/disable 22. Power Supply Inputs
 16. TEST OFF LOAD Signal : TOF 23. Option module slots 1 to 4
- 17. M-G: Test On Load Input (TON) /M-M: Priority source selection
- 18. Not used
- 19. Contact "Start/Stop Gense : if S1 is not available the NC contact (71-72) is close
 20. Contact "Start/Stop Genset"
- : if S1 is not available the NO contact (71-74) is open
- 21. Voltage Sensing Inputs

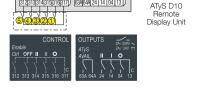

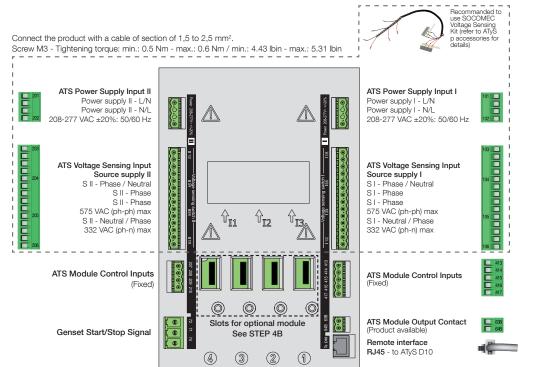



Communication between the software and the ATyS g may be done through the Modbus RTU module which is available as an option. The MODBUS module is to be installed in one of the slots provided in the ATyS g ATS control unit. Easy Config may be installed on a PC connected through MODBUS module for a direct ATyS configuration, either isolated with possibility to create a specific configuration for a later upload and use in ATyS.

Note: The ATyS g may accept 1 additional MODBUS communication module. Refer to the ATyS g accessory section for details.



Factory settings Address: 10 Baud Rate: 38400 Stop Bit: 1 Parity: None

Modbus RS485 - Ref. 48250092

Check

Whilst in manual mode, check the wiring and if ok power up the



LED "Power" Green: ON LED Manuel/Fault Red: ON

ATYS g - 541998E - SOCOMEC EN 15

4.4. Quick Start ATyS g Frame B6 to B8 (800 A to 3200 A) continued

6 Programming the ATyS g

The ATyS g is programmed after wiring verification tests through the front of the ATS Controller in 5 steps:

Note: Ensure that the ATyS g is in "Manual Mode"

powered and with at least one network supply available.

PROG

WARNING!

As a safety measure the READY LED will flash when any of As a safety measure the TEADT LED will liash when any the settings shown on the controller are different to those that are saved. To return to the steady READY LED revert to the saved setting values or save the displayed value by pressing the PROG OK button briefly. (This is intended as a visual alarm in case one has changed the configuration settings but has not yet saved the new values in the product).

For added security the ATyS g may be equipped with a sealable cover so as to limit the access to configuration settings. Refer to the product accessory section for details.



Dip Switch Setting Options

SET the 4 Dip Switches using a small screw driver. Possible variants vary from positions "A to H" as described in the table below. For convenience, the position functions are also described on the front of the ATS controller adjacent to the dip

Note: The READY LED will flash green as soon as settings are changed and until the new settings have been saved by pressing the PROG OK button momentarily.





DIP SWITCH SETTING OPTIONS Three Phase Network Single Phase Network (Attn : Dipswitch 2 is inactive in this position) Three Phase 4 wire Network (Including Neutral) (Allows to detect a loss of neutral for unbalanced loads) Three Phase 3 wire Network (Without Neutral) Load supply down time of 0 second (0DT = 0 sec) Dipswitch 3 Load supply down time of 2 seconds (ODT = 2 sec) G Main - Generator Application Main - Main Application

2 Set Pot

Potentiometer Setting Options

SET the 4 potentiometers using a small screw driver paying attention to the arrow indicating the position. There are a total of 14 positions for which the specific settings are described in the table below.

Note: The READY LED will flash green as soon as settings are changed and until the new settings have been saved by pressing the PROG OK button momentarily.





WARNING! Whatever Pot 1 trimming, it is IMPERATIVE to set Pots 2 to 4.

		POTENTIOMETER	CONFIGURATION													
ı		Position	Auto Conf	1	2	3	4	5	6	7	8	9	10	11	12	13
Un		PP / PN	Mesured						208 / 120V							
		F		50Hz					60Hz							
		Position	1	2	3	4	5	6	7	8	9	10	11	12	13	14
П	ΔU/	U threshold in % of Un	5%	6%	7%	8%	9%	10%	11%	12%	13%	14%	15%	16%	18%	20%
1	ΔF	F threshold in % of Fn	3%	3%	4%	4%	5%	5%	6%	6%	7%	7%	8%	8%	9%	10%
1		Hysteresis					2	0% of	ΔU/ Δ	F sett	ings					
	FT	Source Failure Timer (s)	0	1	2	3	4	5	8	10	15	20	30	40	50	60
	RT	Source Return Timer (min)	0	1	2	3	4	5	8	10	15	20	30	40	50	60



Auto Configuration of Mains Voltage and Frequency



If the 1st potentiometer is not on "Auto Conf", go to STEP 4.

The ATyS g includes an "Auto Configuration" feature to detect the mains voltage and frequency nominal values, phase rotation and neutral position and saves them in the ATS controller.

Note: Before configuring the nominal values ensure that the product is properly wired, verified and ready for commissioning. It is imperative that the product is properly wired, verified and ready for commissioning. It is imperative that the network supply is available and that the wiring to the ATyS g voltage sensing terminals 103 – 106 and 203 – 206 has been done. It is preferable to use the ATyS sensing kit that may be provided as an accessory.

Press and hold the Red "PROG OK" button for >2s to measure the mains voltage and frequency.

Note: The source available LED will flash while the available network is being measured. The READY LED will flash green as soon as settings are measured and until these settings have been saved by pressing the PROG OK button a second time momentarily. (Refer to STEP 4).






Saving the configured values

To SAVE the recorded setting configuration press the PROG OK button momentarily: <60ms

Note: The flashing READY LED goes off once the values are saved in the ATS

At least one of the source availability LED must be ON.

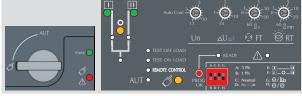




Putting the ATyS g into Auto Operation

After following Steps 1 to 4, and once ready to put the ATyS g into AUTO operation turn the mode selector switch to Auto.

Note: When the product is powered and properly configured, after switching the product from Manual Mode to Auto Mode the READY light should be a steady

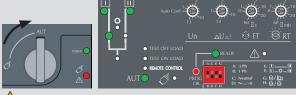

WARNING! Depending on the state of the ATyS g the ATS automation may change the switch position as soon as the mode selector is switched to AUT. This is a normal operation.

- MANUAL Mode LED indication.
 (Yellow steady light when in Manual)
- Node).

 2. AUTO Mode LED indication Green steady light when in Auto mode with no timers running. Green flashing light when in Auto with timers running in the background.

 3. REMOTE CONTROL Mode LED indication. Yellow steady light when in remote control mode. Remote control mode is achieved with the Auto/Manu selector switched to Auto and terminals 312 closed with terminal 317. Remote control orders are received through closing 314 to 316 with 317.

 4. TEST ON LOAD CONTROL Mode LED
- TEST ON LOAD CONTROL Mode LED indication. (Yellow steady light when in TON mode)
- 5. TEST OFF LOAD CONTROL Mode LED indication. (Yellow steady light when in TOF mode).
- TOF mode).

 6. Switch 1 LED position indication. (Green when in position 1).

 7. Source supply I availability LED indication. (Green when supply I voltage is within the set limits).

 8. Zero position LED indication. (Yellow when in position 0).

 8. Switch 2 LED position indication.
- Switch 2 LED position indication. (Green when in position 2).

- Source supply II availability LED indication.
 (Green when supply II voltage is within the set limits).
- the set limits).

 11. Sealing screw location 1 for use with sealing screw location 1 for use with sealing cover (Available as an accessory)

 12. Potentiometer 1: Network Configuration (Auto Configuration or refer to the configuration guide sticker on the front of the ATyS g when using the predefined setting positions 1 to 13).
- 13).
 Potentiometer 2: Voltage and Frequency threshold settings. (Refer to the configuration guide sticker on the front of the ATyS g to set the V / Hz threshold. Postloins 1 to 14).
 Potentiometer 3: Supply FAILURE Time (FT) Adjustable from 0 to 60 seconds.
 Potentiometer 4: Supply RETURN Time (RT) Adjustable from 0 to 60 minutes.
 READY IED Indications.

- 16. READY LED indication Green steady light : Product in AUTO, Watchdog OK, Product Available to changeover.
 Green flashing: Settings displayed not saved or have been changed since last saved.
 (Press PROG OK button in manual
 - mode to save or revert to last saved settings).

- 17. Sealing screw location 2 for use with the sealing cover.

 18. FAULT LED indication. (Red steady light in case of an ATS controller internal fault).
- 19. Configuration dip switches : (4 dip switches with 2 positions in each A to H).
- (4 dip switches with 2 positions in each A to H).


 20. PROG OK: Configuration save push button. (ATTN: Active in Manual Mode ONLV). Press briefly to confirm and save all set configuration settings. Hold pressed for 2 seconds to set the network supply voltage and frequency by Auto Configuration. This is to be followed by pressing briefly to save the set value configured.


 21. Green LED Indication: Product Unavailable / Manual Mode / Fault Condition

 23. Auto / Manual mode selector switch (Key version available as an option)

 24. Padlocking facility

- 24. Padlocking facility (Up to 3 padlocks of dia. 4 8mm)
- 25. Emergency manual operation shaft location (Accessible only in manual
- 26. Switch position indication window: I (On switch I) O (Off) II (On switch II).

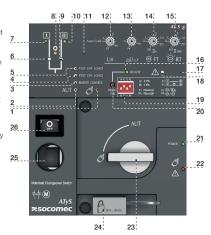

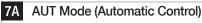


Ensure that the emergency handle is not inserted in the product and turn the mode selector to the AUT position

LED "Power" Green: ON LED Manuel/Default: OFF






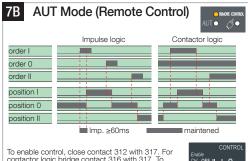





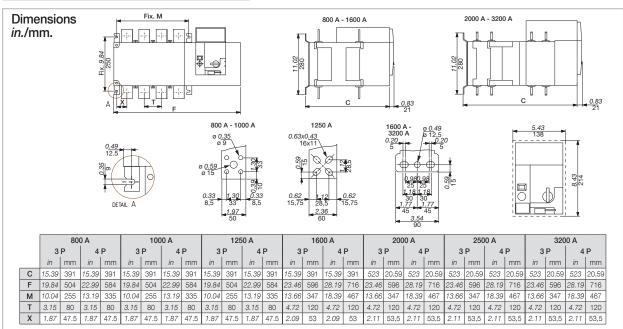


CORPORATE HQ CONTACT: SOCOMEC SAS 1-4 RUE DE WESTHOUSE - 67235 BENFELD, FRANCE - WWW.SOCOMEC.COM

EN 17 ATYS g - 541998E - SOCOMEC


5. GENERAL OVERVIEW

5.1. Product introduction

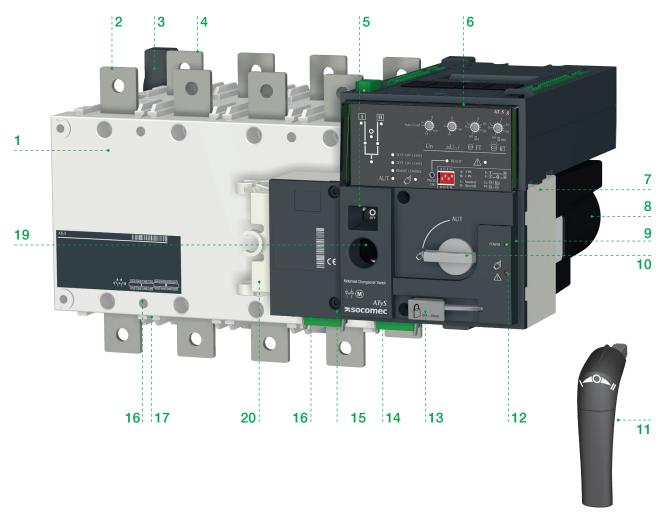

- 1. Power Section: Changeover switch assembly with inherent mechanical interlock
- 2. Front: Switch number 1 terminals (3 or 4 pole)
- 3. Back-plate mounting ATyS fixing brackets
- 4. Back: Switch number 2 terminals (3 or 4 pole)
- 5. Switch position indication window: I (On) O (Off) II (On)
- 6. ATS control module with integrated dual power supply
- 7. Motorized Control Unit
- 8. Motor housing
- 9. Green LED Indication: Power
- 10. Auto / Manual mode selector switch
- 11. Emergency manual operation "Direct Handle"
- 12. Red LED Indication: Product Unavailable / Manual Mode / Fault Condition
- 13. Padlocking facility (Up to 3 padlocks of dia. 4 8mm)
- 14. Output contacts x 4 (Position indication I-O-II and product availability outputs)
- 15. Facility for locking all controls in the zero position using a RONIS EL11AP Lock
- 16. Input contacts x 5:
 - Position order I-O-II
 - Remote control enable
 - Override controls and force to Off position
- 17. Sliders for Terminal Shields
- 18. Fixing holes for terminal Shields
- 19. Emergency manual operation shaft location (Accessible only in manual mode)
- 20. Clip for emergency handle storage


5.2. Product identification

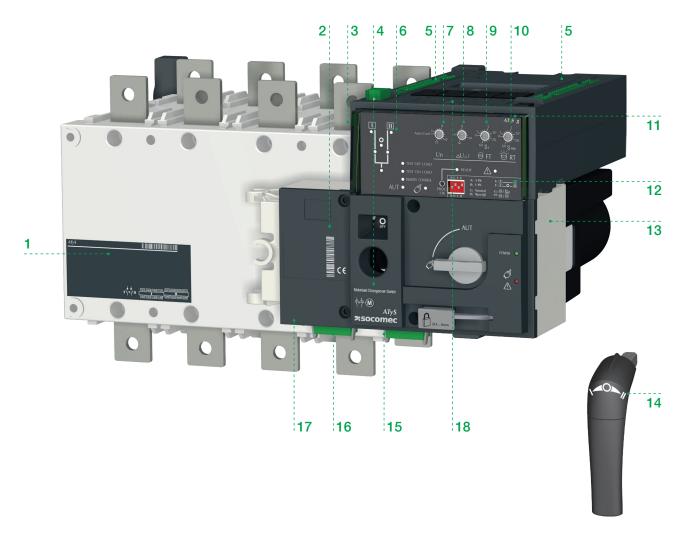

- 1. Main changeover switch identification label:
 - Electrical characteristics
 - Applicable standards and
 - Terminal incoming and outgoing wiring details.
- 2. Configuration Guide for network voltage, frequency and thresholds. (Potentiometer 1 & 2) (Also includes the ATyS g product serial number, barcode & CE marking).
- 3. Switch 1 (Front) and Switch 2 (back) identification labels
- 4. ATyS g product current rating and reference number label
- 5. ATS controller contact identification labels
- 6. Network status and switch position pictogram with LED's
- 7. Network voltage and frequency configuration setting potentiometer.
- 8. Voltage and frequency threshold setting potentiometer.
- 9. Mains failure time setting potentiometer. (0-60 seconds)
- 10. Mains return timer setting potentiometer. (0-60 minutes)
- 11. ATyS product type identification. (ATyS t, ATyS g or ATyS p)
- 12. Dip switch configuration identification.
- 13. Motor barcode and serial number
- 14. Emergency manual operation direction of rotation indication
- 15. Output contacts identification label.
- 16. Input contacts identification label.
- 17. Guide to ATyS g programming steps.
- 18. Reset button (Push and hold for at least 1s to restart the ATS controller).

ATYS g - 541998E - SOCOMEC EN 19

5.3. ATS control module interface

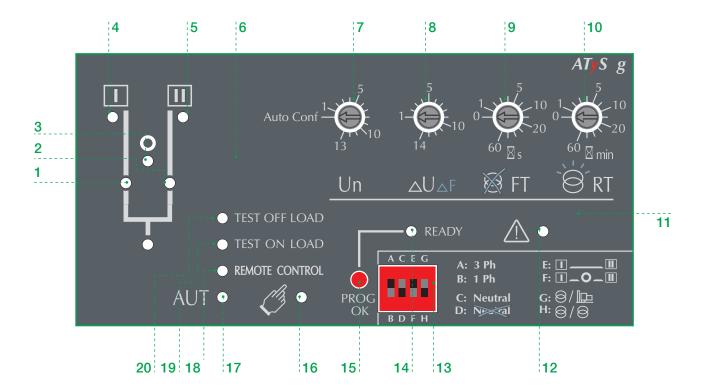

- 1. Switch 1 LED position indication. (Green when in position I).
- 2. Switch 2 LED position indication. (Green when in position II).
- 3. Zero position LED indication. (Yellow when in position 0).
- 4. Source supply I availability LED indication. (Green when supply I voltage is within the set limits).
- 5. Source supply II availability LED indication. (Green when supply II voltage is within the set limits).
- 6. Sealing screw location 1 for use with sealing cover (Available as an accessory)
- 7. Potentiometer 1: Network Configuration. (Auto Configuration or refer to the configuration guide sticker on the front of the ATyS g when using the predefined setting positions 1 to 13).
- 8. Potentiometer 2: Voltage and Frequency threshold settings. (Refer to the configuration guide sticker on the front of the ATyS g to set the V / Hz threshold. Positions 1 to 14).
- 9. Potentiometer 3: Supply FAILURE Time (FT) Adjustable from 0 to 60 seconds.
- 10. Potentiometer 4: Supply RETURN Time (RT) Adjustable from 0 to 60 minutes.
- 11. Sealing screw location 2 for use with the sealing cover.
- 12. FAULT LED indication.
 - Red steady light in case of an ATS controller internal fault and blinking in case of an external fault (rotation incorrect / neutral position incorrect).
 - Switch the product from Auto to Manual and back to Auto to reset a fault condition.
- 13. Configuration dip switches: (4 dip switches with 2 positions in each A to H).
- 14. READY LED indication
 - Green steady light: Product in AUTO, Watchdog OK, Product Available to changeover. Green flashing: Settings displayed not saved or have been changed since last saved. (Press PROG OK button in manual mode to save or revert to last saved settings).
- 15. PROG OK: Configuration save push button. (ATTN: Active in Manual Mode ONLY).
 - Press briefly to confirm and save all set configuration settings.
 - Hold pressed for 2 seconds to set the network supply voltage and frequency by Auto Configuration.
 - This is to be followed by pressing briefly to save the set value configured (see «8.3. Programming», page 56).
- 16. MANUAL Mode LED indication. (Yellow steady light when in Manual Mode).
- 17. AUTO Mode LED indication
 - Green steady light when in Auto mode with no timers running.
 - Green flashing light when in Auto with timers running in the background.
- 18. REMOTE CONTROL Mode LED indication.
 - Yellow steady light when in remote control mode.
 - Remote control mode is achieved with the Auto/Manu selector switched to Auto and terminals 312 closed with terminal 317. Remote control orders are received through closing 314 to 316 with 317.
- 19. TEST ON LOAD CONTROL Mode LED indication. (Yellow steady light when in TON mode)
- 20. TEST OFF LOAD CONTROL Mode LED indication. (Yellow steady light when in TOF mode).

20 EN

5.4. Environmental

The ATyS g product meets the following environmental requirements:

5.4.1. IP Rating



- IP2X against direct contact for the ATyS g motorization control unit.
- IP2X against direct contact for the power section with the connections in place and when including suitable, correctly installed incoming and outgoing terminal shields.
- IP 0 for the bare power section without terminal shields in place.

5.4.2. Operating Conditions

5.4.2.1. Temperature

- From -20 to +40°C without derating
- From -20 to +70°C when applying a Kt derating correction factor



Kt: Correction Factor	Temperature
0.9	40 °C 50 °C
0.8	50 °C 60 °C
0.7	60 °C 70 °C

^{*} Simplified derating method: Ithu ≤ Ith x Kt

5.4.2.2. Hygrometry



- 80% humidity without condensation at 55°C
- 95% humidity without condensation at 40°C

5.4.2.3. Altitude



- Up to 2000m in altitude without derating
- For higher altitude the Ka correction factors below apply

Ka: Correction Factor	2000 m < A ≤ 3000 m	3000 m < A ≤ 4000 m
Ue	0.95	0.8
le	0.85	0.85

5.4.3. Storage Conditions

5.4.3.1. Temperature



• From -40 to +70°C


5.4.3.2. Storage duration period


- Maximum storage up to a period of 12 months
- (Recommendation: To be stored in dry, non corrosive and non saline atmospheric conditions)

^{*} A more precise calculation may be done for specific applications. Should this be required please contact SOCOMEC.



≤ 630 A: a maximum of 3 boxes may be stocked vertically≥ 800 A: a maximum of 1 box may be stocked vertically

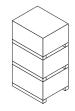

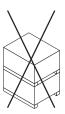

5.4.4. Volume and shipping weights by reference ATyS g

	Detina	N° of	Reference	Weig	ht (kg)	Volume (cm)
Frame Size	Rating	Poles	Number	Net	Gross	inc Packing
	1054	3	9553 3012	7,1	10,3	585x385x310
	125A	4	9553 4012	8,3	11,6	585x385x310
B3	1604	3	9553 3016	7,1	10,3	585x385x310
B3	160A	4	9553 4016	8,3	11,6	585x385x310
	200A	3	9553 3020	7,1	10,3	585x385x310
	200A	4	9553 4020	8,3	11,6	585x385x310
	250A	3	9553 3025	8,0	11,3	585x385x310
	250A	4	9553 4025	8,8	12,1	585x385x310
B4	315A	3	9553 3031	8,1	11,4	585x385x310
D4	313A	4	9553 4031	9,1	12,5	585x385x310
	400A	3	9553 3040	8,1	11,4	585x385x310
	400A	4	9553 4040	9,1	12,5	585x385x310
	500A	3	9553 3050	12,8	16,1	585x385x385
B5	300A	4	9553 4050	14,7	18,0	585x385x385
	630A	3	9553 3063	13,3	16,6	585x385x385
	030A	4	9553 4063	15,4	18,7	585x385x385
	8004	3	9553 3080	29,0	45,0	730x800x600
	800A	4	9553 4080	33,3	49,3	730x800x600
B6	1000A	3	9553 3100	29,5	45,5	730x800x600
		4	9553 4100	34,0	50,0	730x800x600
	1250A	3	9553 3120	30,0	46,0	730x800x600
	1200A	4	9553 4120	34,7	50,7	730x800x600
B7	1600A	3	9553 3160	34,2	50,2	730x800x600
D1	1000A	4	9553 4160	40,5	56,5	730x800x600
	2000A	3	9553 3200	51,8	67,8	730x800x600
	2000/1	4	9553 4200	62,7	78,7	730x800x600
B8	2500A	3	9553 3250	51,8	67,8	730x800x600
	2000A	4	9553 4250	62,7	78,7	730x800x600
	3200A	3	9553 3320	62,1	78,1	730x800x600
	0200A	4	9553 4320	76,4	92,4	730x800x600

5.4.5. CE marking

The ATyS g complies the with the European directive for:

- The Electromagnetic compatibility no. 2004/108/CE dated 15th of December 2004.
- Low voltage directive no. 2006/95/CE dated 12th of December 2006.



5.4.6. Lead free process

• The ATyS g complies with the European directive for RoHS.



5.4.7. WEEE

The ATyS g is built in accordance with 2002/96/CE directive:



5.4.8. EMC standard

The ATyS g is designed and built in accordance with IEC 60947-1 standards (Products intended to be installed in an «Industrial, Commercial and/or Residential Environment» therefore respecting both Class A as well as Class B EMC requirements).

Description	Std (IEC)	Requirement (criteria)
Conducted	CISPR 11	Class B
Radiated	CISPR 11	Class B
ESD contact	61000-4-2	4KV (B)
ESD air	61000-4-2	8KV (B)
Electromagnetic field	61000-4-3	10V/m (A)
RF Conducted	61000-4-6	10V (A)
Burst	61000-4-4	2KV (B) power 1KV (B) control
Surge Common	61000-4-5	2KV (B)
Surge differential	61000-4-5	1KV (B)

ATYS g - 541998E - SOCOMEC EN 23

5.5. ATyS g ACCESSORIES AVAILABLE

BRIDGING BARS

To connect switch I & II load terminals together.

TERMINAL SHROUDS (125 TO 630 A)

Incoming and outgoing protection against direct contact with the connection terminals or parts. Cannot be mounted in the rear position at the same time as the voltage sensing and power outlet kit or the bridging

Can be mounted top or bottom, in front or in rear position.

TERMINAL SCREENS

Incoming and outgoing protection against direct contact with the connection terminals or parts.

DOOR ESCUTCHEON PLATE

An accessory to be fixed onto a cabinet door to frame the controller part of flush mounted ATyS g transfer switches.

DC POWER SUPPLY (DC -> AC)

Allows a standard 230Vac ATvS d to be supplied through a 12/24/48Vdc Aux Power supply.

SUPPLEMENTARY AUXILIARY CONTACT (AC)

Pre-breaking and signaling of positions I and II: 1 additional auxiliary contact NO / NC auxiliary contact in each position. Included as standard for ratings from 2000 to 3200A. For Low level AC: please consult SOCOMEC.

KEY LOCK AUTO / MANUAL SELECTOR SWITCH

The ATyS g mode selector switch is delivered with a rotary handle as standard. This can be replaced with a key lock.

RONIS KEY PADLOCKING ACCESSORIES

Locking of the electrical and manual operation by means of a RONIS EL11AP lock. Possibility of locking in all positions, if the "Padlocking in the 3 positions" option is ordered.

Not compatible with flush mounting.

PADLOCKING IN 3 POSITIONS

Allows locking of the operation in the 3 positions I. 0 and II. (Factory fitted accessory)

CONTROL VOLTAGE TRANSFORMER

Allows a standard 230 V AC device to be supplied with 400 VAC.

REMOTE INTERFACES D10

Remote Display: Allows source supply state and switch positions to be displayed remotely. (LED display)

Typically door mounted or ≤3m away from the ATyS.

COMMUNICATION CABLE

RJ 45 communication cable (3m long) for use with the D10 remote display/controller or Ethernet modules.

COMMUNICATION MODULE

Optional MODBUS RS485 communication module.

Refer to the end of this instruction manual or the latest SOCOMEC product catalogue.

(Downloadable from www.socomec.com)


ATYS g - 541998E - SOCOMEC

ATYS g - 541998E - SOCOMEC EN 25

6. INSTALLATION

6.1. Product dimensions

6.1.1. Dimensions: Frame B3 to B5 (125 A to 630 A)

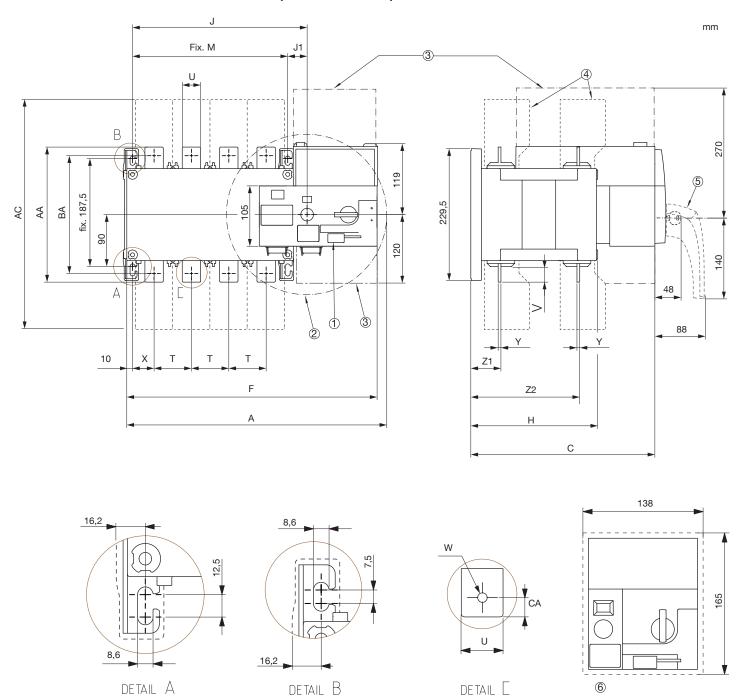

- 1. Padlocking Facility: Locking bracket for up to 3 padlocks of dia. 4 8mm
- 2. Emergency manual operation: Maximum operating radius with an operating angle of 2x 90°
- 3. Connection and disconnection area
- 4. Phase Barriers
- 5. Emergency removable handle
- 6. Flush mounting cutout dimensions for front door





CAUTION! To consider the space required for manual operation and wiring (when using the ATyS g emergency handle: note 2).

	125	5 A	160) A	200) A	250	D A	31	5 A	400) A	500	0 A	630	0 A
	3 P	4 P	3 P	4 P	3 P	4 P	3 P	4 P	3P	4P	3P	4P	3P	4P	3P	4P
Α	304	334	304	334	304	334	345	395	345	395	345	395	394	454	394	454
AA	135	135	135	135	135	135	160	160	170	170	170	170	260	260	260	260
AC	233	233	233	233	233	233	288	288	288	288	288	288	402	402	402	402
BA	115	115	115	115	115	115	130	130	140	140	140	140	220	220	220	220
С	244	244	244	244	244	244	244	244	244	244	244	244	321	321	321	321
CA	10	10	10	10	10	10	15	15	15	15	15	15	15	15	20	20
F	286,5	317	286,5	317	286,5	317	328	378	328	378	328	378	377	437	377	437
Н	151	151	151	151	151	151	152	152	152	152	152	152	221	221	221	221
J	154	184	154	184	154	184	195	245	195	245	195	245	244	304	244	304
J1	34	34	34	34	34	34	35	35	35	35	35	35	34	34	34	34
М	120	150	120	150	120	150	160	210	160	210	160	210	210	270	210	270
Т	36	36	36	36	36	36	50	50	50	50	50	50	65	65	65	65
U	20	20	20	20	20	20	25	25	35	35	35	35	32	32	45	45
V	25	25	25	25	25	25	30	30	35	35	35	35	50	50	50	50
W	9	9	9	9	9	9	11	11	11	11	11	11	14	14	13	13
Х	28	22	28	22	28	22	33	33	33	33	33	33	42,5	37,5	42,5	37,5
Υ	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	5	5	5	5
Z 1	38	38	38	38	38	38	39.5	39.5	39.5	39.5	39.5	39.5	53	53	53	53
Z 2	134	134	134	134	134	134	133.5	133.5	133.5	133.5	133.5	133.5	190	190	190	190

EN 27 ATYS g - 541998E - SOCOMEC

6.1.2. Dimensions: Frame B6 & B7 (800 A to 1600 A)

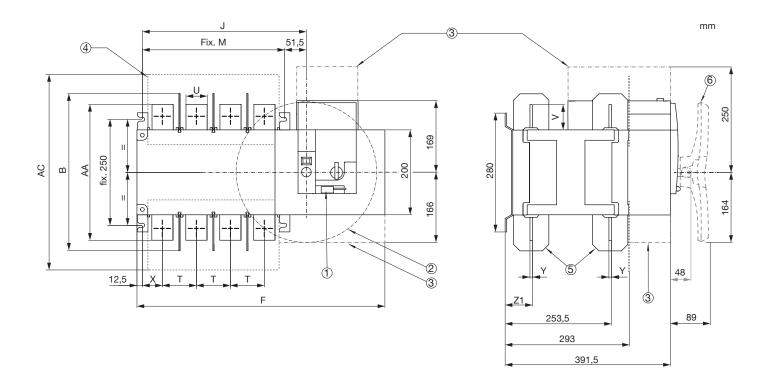

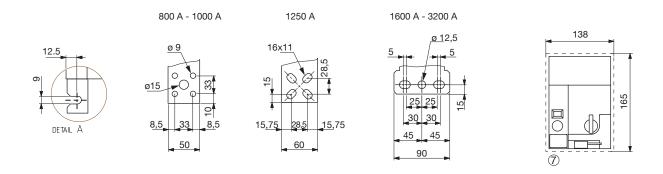


- Padlocking Facility: Locking bracket for up to 3 padlocks of dia. 4 8mm
- Emergency manual operation: Maximum operating radius with an operating angle of 2x 90° Connection and disconnection area
- Terminal screens
- **Phase Barriers**
- 6. Emergency removable handle
- 7. Flush mounting cutout dimensions for front door

	800	0 A	100	0 A	125	0 A	160	0 A
	3P	4P	3P	4P	3P	4P	3P	4P
AA	321	321	321	321	330	330	288	288
AC	461	461	461	461	461	461	531	531
В	370	370	370	370	370	370	380	380
F	504	584	504	584	504	584	596	716
J	307	387	307	387	307	387	399	519
М	255	335	255	335	255	335	347	467
T	80	80	80	80	80	80	120	120
U	50	50	50	50	60	60	90	90
V	60.5	60.5	60.5	60.5	65	65	44	44
Х	47.5	47.5	47.5	47.5	47.5	47.5	53	53
Υ	7	7	7	7	7	7	8	8
Z 1	66.5	66.5	66.5	66.5	66.5	66.5	67.5	67.5



CAUTION! To consider the space required for manual operation and wiring (when using the ATyS g emergency handle: note 2).

6.1.3. Dimensions: Frame B8 (2000 A to 3200 A)

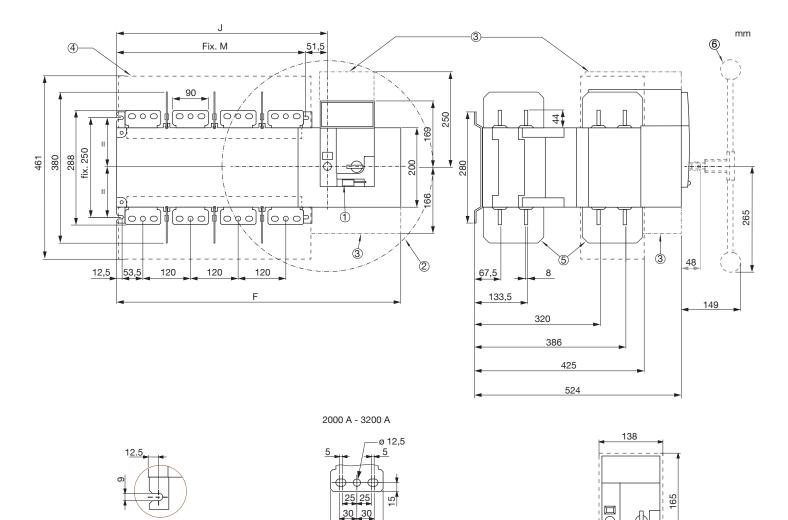

- 1. Padlocking Facility: Locking bracket for up to 3 padlocks of dia. 4 8mm
- 2. Emergency manual operation: Maximum operating radius with an operating angle of 2x 90°

90

- 3. Connection and disconnection area
- 4. Terminal screens
- 5. Phase Barriers
- 6. Emergency removable handle

DETAIL A


7. Flush mounting cutout dimensions for front door

	200	0 A	320	0 A
	3P	4P	3P	4P
F	596	716	596	716
J	398,5	518,5	398,5	518,5
М	347	467	347	467



CAUTION! To consider the space required for manual operation and wiring (when using the ATyS g emergency handle: note 2).

6.2. Mounting orientation

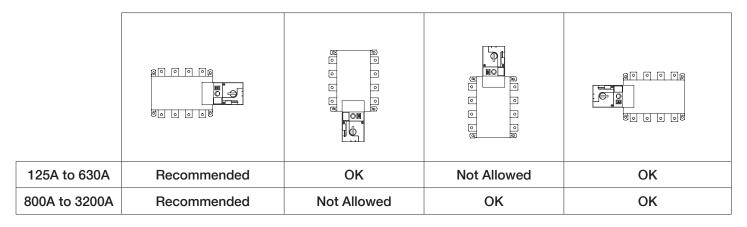



CAUTION! Always install the product on a flat and rigid surface.

6.3. Assembly of customer mounted accessories




DANGER! Never handle any customer mounted accessories while there may be the risk of voltage being or becoming present.


6.3.1. Clip for emergency handle storage



Max tightening torque 2,5 Nm

6.3.2. Bridging bar installation

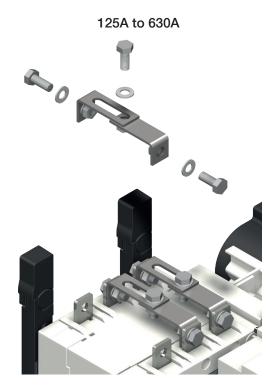

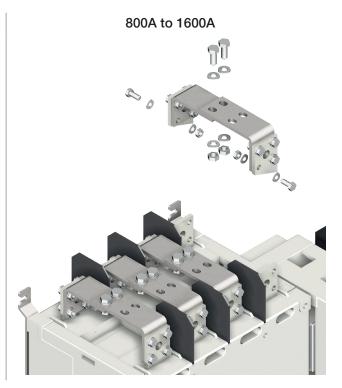


It is possible to mount the bridging bars on either side of the switch

Recommended tightening torque:	Maximum tightening torque:
M6: 4,5 N.m	M6: 5,4 N.m
M8: 8,3 N.m	M8: 13 N.m
M10: 20 N.m	M10: 26 N.m
M12: 40 N.m	M12: 45 N.m

6.3.3. Terminal shrouds


Available from 125 A to 630 A Frame B3 to Frame B5:


- Upstream, downstream, front or rear mounting.
- When fitted with bridging bars only the front terminal shrouds are to be installed.

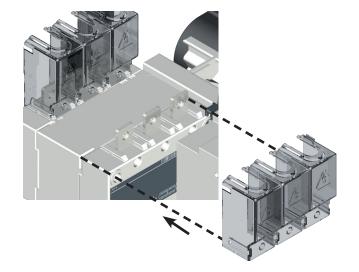


ATYS g - 541998E - SOCOMEC

6.3.4. Terminal screens

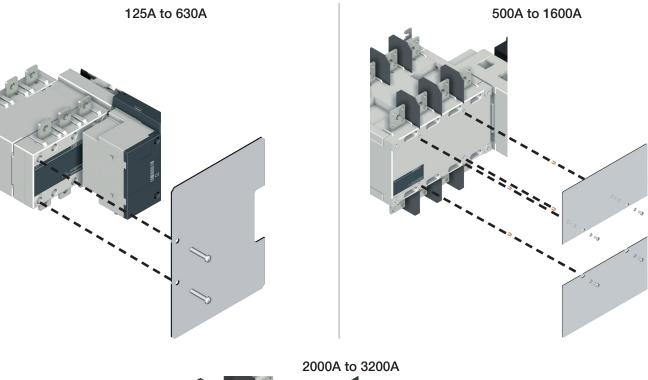

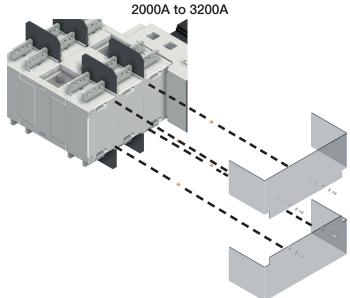

6.3.5. Copper bar connection kits (2000A to 3200A: Frame B8)

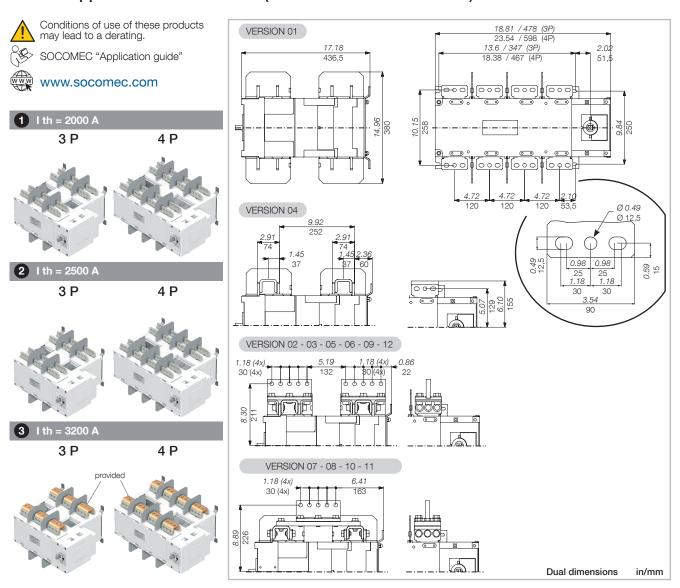

Data for Bolts, Nuts and Washers for Busbar Connections.



Connection re	eference numbers	and contents:
x 1	708 lb-in x 6	x 1
included with 3200A product as standard	2699 1200 2699 1201	708 lb-in x 6 80 Nm x 6 2629 1200
x 2	x 1 + 708 lb-in x 6	x 1 + 708 lb-in x 6
708 lb-in 80 Nm 2639 1200	80 Nm 4109 0250	80 Nm 30 4109 0320

Rondelle contact MOY. M M12 H M12
NFE 25 511
01 H M12-35 6.8 - 6 x 12 x 6 x
02 H M12-55 6.8 - 3 x 6 x 3 x
03 H M12-55 6.8 - 5 x 10 x 5 x
04 H M12-35 6.8 - 3 x 3 x -
B H M12-45 6.8 - 3 x -
05 H M12-65 6.8 - 3 x 6 x 3 x
06 H M12-65 6.8 - 5 x 10 x 5 x
07 H M12-55 6.8 - 3 x 6 x 3 x
08 H M12-55 6.8 - 5 x 10 x 5 x
09 H M12-55 6.8 - 10 x 20 x 10 x
10 H M12-65 6.8 - 3 x 6 x 3 x
11 H M12-65 6.8 - 5 x 10 x 5 x
12 H M12-65 6.8 - 10 x 20 x 10 x


(j

Note: reference numbers and quantity given above and below are for one connection and per pole. For a full set multiply the quantity indicated by the number of poles (3 or 4 pole) and then multiply by 2 (N° of switches).

ATYS g - 541998E - SOCOMEC EN 33


6.3.6. Incoming copper bar connection kit assembly

2000 A - 2500 A (Minimum Cu bar section for Ith 2000 A 3x100x5mm; and for Ith 2500 A 4x100x5mm)

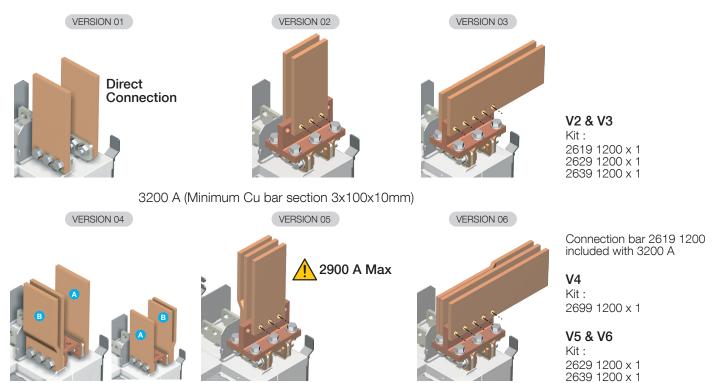


6.3.7. Outgoing bridge connection assembly

2000 A - 2500 A (Minimum Cu bar section for Ith 2000 A 3x100x5mm; for Ith 2500 A 4x100x5mm)

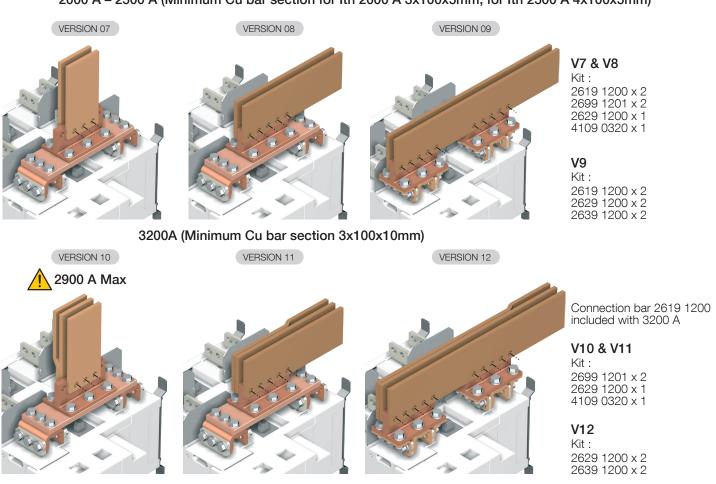

6.3.8. Power supply

Power Transformer intended for 400 VAC, Phase to Phase voltage applications that do not provide the availability of a neutral conductor. Transformer data: 400 VAC – 230 VAC: 200 VA. In this case the ATyS g will require 2 transformers to be connected as shown below.

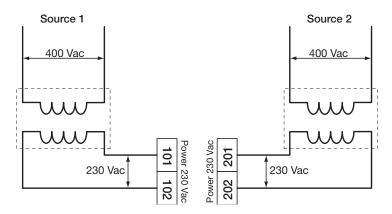


6.3.9. Padlocking key interlocks

Intended for locking the electrical control and the backup control in position 0 using a RONIS EL11AP lock. As standard, key locking is in the 0 position.

Optionally and when including the option "padlocking in 3 positions" key locking will be in positions I, 0 or II




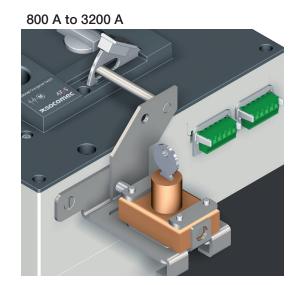

ATYS g - 541998E - SOCOMEC EN 35


6.3.10. Additional auxiliary contacts

Intended for pre breaking and signaling of positions I and II: A maximum of 2 NO/NC additional auxiliary contacts can be fitted for each position. (Customer assembly may be required.)

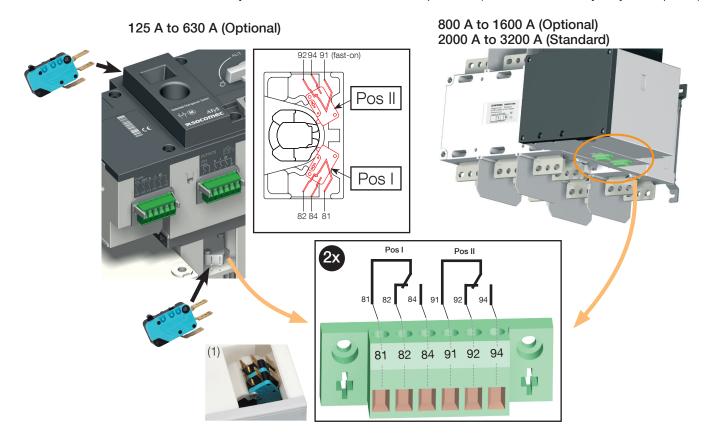

(1) When mounting one auxiliary contact on position I or II, use the short screws provided. When mounting two auxiliary contacts on position I or II, use the long screws provided.

6.4. ATyS g Optional module installation

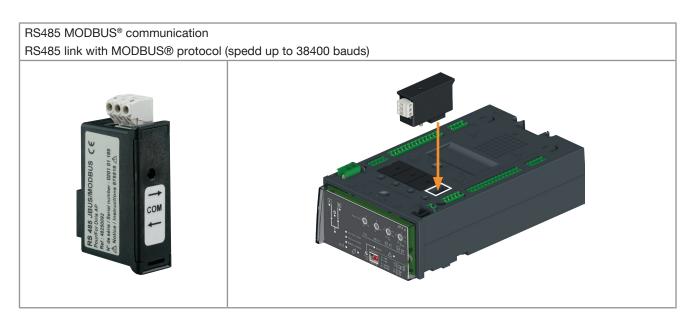

The ATyS g includes several slots on the top part of the ATS controller that are dedicated to fixing of optional RS485 communication module. The module may be mounted in one slot. It's recommended to be monted in slot 1 or 2.




CAUTION! Connect the modules with the power off. Ensure that the option fixing bolts are tightened correctly


7. CONNECTIONS

7.1. Power circuits

For specific networks and power connection diagram possibilities, please refer to page 39.

7.1.1. Cable or bar connections

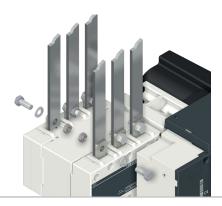

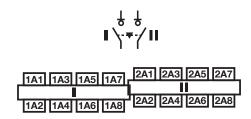

Recommended tightening torque:

M6: 4,5 N.m M8: 8,3 N.m M10: 20 N.m M12: 40 N.m Maximum tightening torque:


M6: 5,4 N.m M8: 13 N.m M10: 26 N.m M12: 45 N.m


CAUTION! - For 125 - 160A (Uimp = 8kV). Terminations must respect a minimum of 8 mm clearance from live parts to parts intended to be earthed and between poles.


- For 200 - 3200 (Uimp = 12kV). Terminations must respect a minimum of 14 mm clearance from live parts to parts intended to be earthed and between poles.

7.1.2. Power connection terminals

125A to 630A - Refer to section "Product dimensions", page 26 for power connection terminal details.

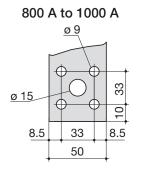

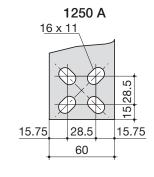

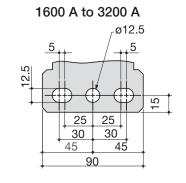

7.1.3. Power connection cross-section


	В3			B4			B5		B6			B7		B8	
	125 A	160 A	200 A	250 A	315 A	400 A	500 A	630 A	800 A	1000 A	1250 A	1600 A	2000 A	2500 A	3200 A
Minimum cable section Cu (mm²)	35	35	50	95	120	185	2x95	2x120	2x185	-	-	-	-	-	-
Recommended cable section Cu (mm²), Ith	-	-	-	-	-	-	2x32 x5	2x40 x5	2x50 x5	2x63 x5	2x60 x7	2x100 x5	3x100 x5	2x100 x10	3x100 x10
Maximum cables section Cu (mm2)	50	95	120	150	240	240	2x185	2x300	2x300	4x185	4x185	6x185	-	-	-
Maximum bars width Cu (mm)	25	25	25	32	32	32	50	50	63	63	63	100	100	100	100

Note for all ratings: Take into account the connection cable lengths and/or others environmental specific operating conditions.

7.1.4. Connection


The product is delivered with the following configuration.

- Connectors 101 to 106, I 1/2 to I 7/8, located on the right side of the controller are associated with switch I
- Connectors 201 to 206, II 1/2 to II 7/8, located on the left side of the controller are associated with switch II.

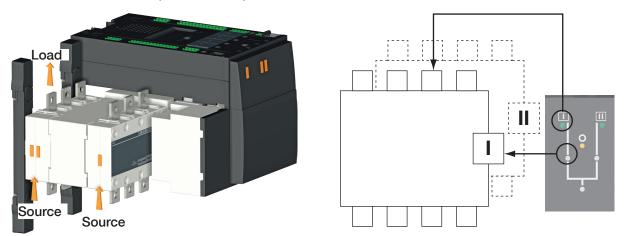



CAUTION! The ATyS MUST be connected with the «main supply Switch I» and the «Genset supply on Switch II». It is NOT possible to connect the priority (main) supply to Switch II. (Should you require the priority supply on Switch II order an ATyS that is programmable).

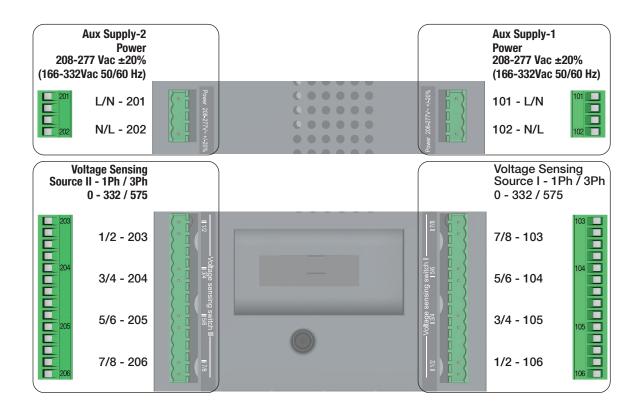






CAUTION! It is recommended to connect power and sensing with the ATyS voltage sensing and power supply kit available as an accessory. In this case ensure to mount the kit before connecting the power cables.

7.2. Networks and Power Connection possibilities

7.2.1. Type of networks

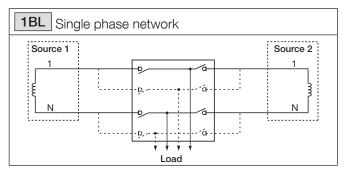

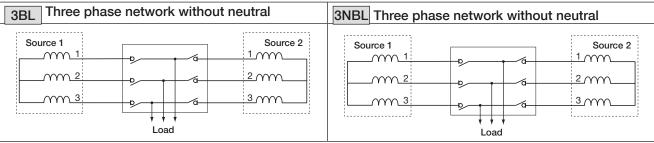

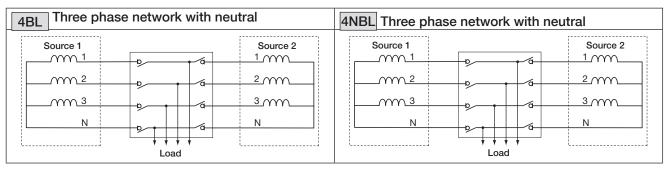


7.2.2. Sensing details

Network type					
Ţ.	1BL	3BL	3NBL	4BL	4NBL
Source 1	1 phase	3 phase	3 phase	3 phase	3 phase
Source 2	2 wire	3 wire	3 wire	4 wire	4 wire
Source 1	1 N	L3 NM L2	L3 NM L2	1 3 N 2	3 N 2
Source 2	1 N	L3 NM L2	L3 NM L2	1 3 N 2	1 1 3 N 2
Voltage sensing		<u>'</u>			
Source 1	- V1	U12, U23, U31	U12, U23, U31	U12, U23, U31 V1, V2, V3	U12, U23, U31 V1, V2, V3
Source 2	- V1	U12, U23, U31	U12, U23, U31 -	U12, U23, U31 V1, V2, V3	U12, U23, U31 V1, V2, V3
Source presence (source available)	~	~	~	~	~
Source in ranges (U, V, F)	~	~	~	~	~
Rotation phase order	-	~	~	~	~
Neutral position	-	-	-	~	~
Voltage unbalanced is lower than threshold	-	~	~	~	~

7.3. Control circuits

7.3.1. Typical ATyS g wiring

Example: Control wiring for a 400VAC application having a 3 phase and neutral supply.

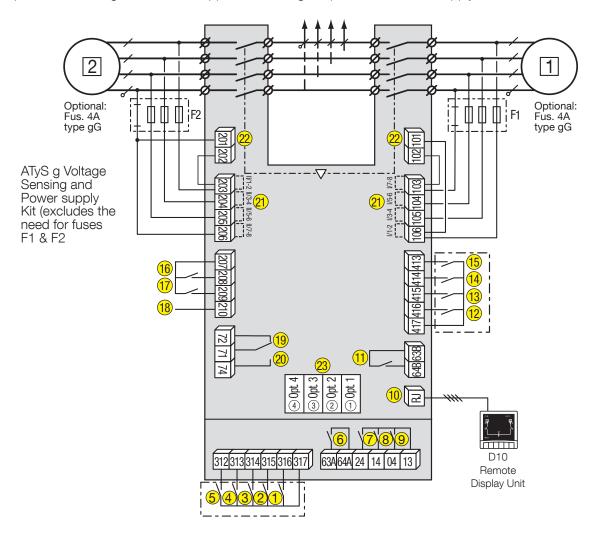

- 1 preferred source
- 2 alternate source
 - Position 0 order Position I order
 - 1. 2. 3.
 - Position II order Zero position priority order
 - 4. 5. Auto) Remote Control Enable (Priority over
 - 6. 7. 8. 9. Product Available output (Motor) Position II aux contact
 - Position I aux contact
 - Position 0 aux contact

 - O/P to D10 remote display Product Available output (ATS) I/P Inhibition of the ATS controls I/P Manual retransfer

- 14.
- M-M : activation of the DTC function M-G: S2 Stability Time Bypass: 2AT M-G: Priority to TON / M-M: Priority 15.
- rest of Control of Con 17.
- 18. Not used
- Genset starting and stopping order Genset starting and stopping order

Generator Contact Contact	Control	71/72 (19)	71/74 (20)
Generator stopping Contact open Contact closed	Generator starting	Contact closed	Contact open
		Contact open	Contact closed

- Voltage sensing inputs Power supply Inputs Option module slots 1 to 4

	. (-)	. (- /
Generator starting	Contact closed	Contact open
Generator stopping		Contact closed






DANGER! Do not handle any control or power cables connected to the ATyS when voltage may be present.




CAUTION! Verify that the Auxiliary power supply feeding terminals 101 and 102 / (201 and 202) are within the limits of 208VAC -> 277VAC ±20%

7.3.2. ATyS g input and output contacts

7.3.2.1. Motorisation module wiring

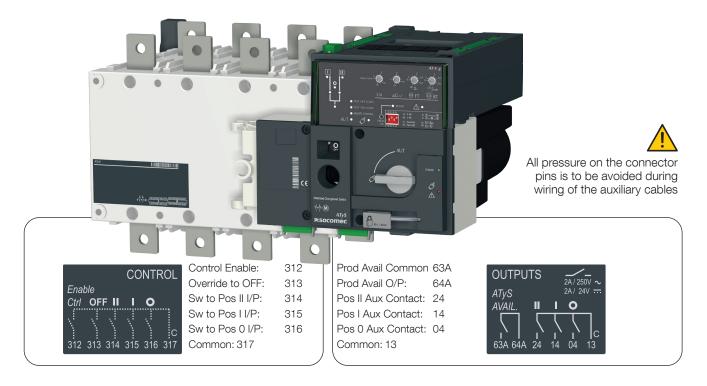

7.3.2.2. ATS control module wiring

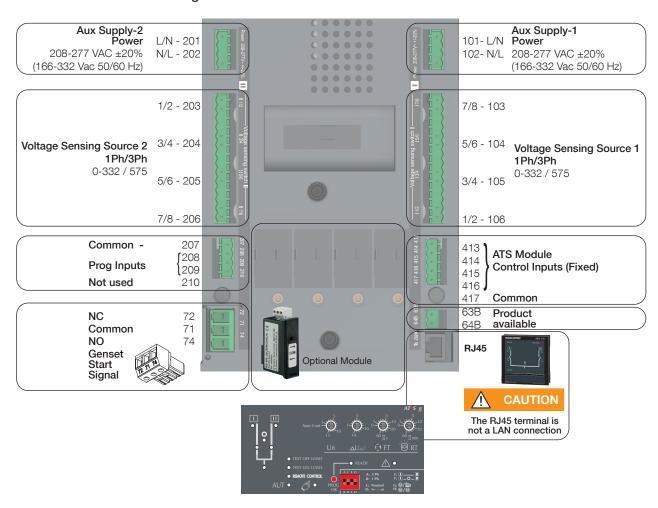

7.3.2.3. Terminal denomination, description and characteristics.

Denomination	Terminal	Description	Characteristics	Recommended Cable Section		
	04	Aux Contact Position 0 - Normally Open Contact				
	13	Common for Aux Contacts positions I - 0 - II				
Motorisation	14	Aux Contact position I: Normally Open Contact				
Module	24	Aux Contact position II: Normally Open Contact	Dry Contacts 2A AC1 / 250V 2A / 24Vdc	1.5 – 2.5 mm2		
Output Contacts	63A	Motorisation module available output. Closed when the	2007 27 17 2 17 40			
	64A	ATyS g is in Auto mode and motorisation is operational. (No Fault powered and ready to changeover)				
470.0	63B	ATS control module available output. Closed when the	5 6			
ATS Output Contact	64B	ATyS g is in Auto mode and ATS is operational. (No Fault, powered and ready for a changeover sequence)	Dry Contacts 2A AC1 / 250V	1.5 – 2.5 mm2		
0 101 1/01	71	Signal to Start / Stop the Genset : Common for 72 & 74				
Genset Start/Stop Signal	72	Signal to Start / Stop the Genset : NC contact. (71/72)	Dry Contacts 2A AC1 / 250V	1.5 – 2.5 mm2		
O.g. io.	74	Signal to Start / Stop the Genset : NO contact. (71/74)	2, 1, 10 1 / 2001			
	81	Common for Aux Contacts positions I				
Additional Aux	82	Aux Contact position I : Normally Closed Contact				
Contact	84	Aux Contact position I : Normally Open Contact	Dry Contacts	15 05 mm0		
Included with	91	Common for Aux Contacts positions II	2A AC1 / 250V	1.5 – 2.5 mm2		
2000A to 3200A	92	Aux Contact position II: Normally Closed Contact				
	94	Aux Contact position II: Normally Open Contact				
ATS Power	101 - L/N	Power supply I – L/N	208 - 277VAC ± 20% :	1.5.05.000		
supply Input I	102 - N/L	Power supply I – N/L	50/60 Hz	1.5 – 2.5 mm2		
ATS Voltage	103 - 7/8	Phase or neutral connected on power contact 7 or 8 of Switch I	575 Vac			
Sensing Input*	104 - 5/6	Phase connected on power contact 5 or 6 of Switch I	(ph-ph) max	1.5 – 2.5 mm2		
Switch I	105 - 3/4	Phase connected on power contact 3 or 4 of Switch I	332Vac	1.0 2.0111112		
OWITCH	106 - 1/2	Phase or neutral connected on power contact 1 or 2 of Switch I	(ph-n) max			
ATS Power	201 - L/N	Power supply II – L/N	208 - 277VAC ± 20% :	1.5 – 2.5 mm2		
supply Input II	202 - N/L	Power supply II – N/L	50/60 Hz	1.0 – 2.0 111112		
ATS Voltage	203 - 1/2	Phase or neutral connected on power contact 1 or 2 of Switch II	575 Vac			
Sensing Input*	204 - 3/4	Phase connected on power contact 3 or 4 of Switch II	(ph-ph) max	1.5 – 2.5 mm2		
Switch II	205 - 5/6	Phase connected on power contact 5 or 6 of Switch II	332Vac			
	206 - 7/8	Phase or neutral connected on power contact 7 or 8 of Switch II	(ph-n) max			
	312	Remote Control Mode Enable when closed with 317				
Motorisation	313	Position 0 order if closed with 317. (Priority order input forcing the product to remote control mode and 0 position)	Attn:	1.5 – 2.5 mm2		
Module	314	Position II order if closed with 317	Do not connect to any Power supply			
Control Inputs	315	Position I order if closed with 317				
·	316	Position 0 order if closed with 317	Max cable length 100m			
	317	Common control terminal for 312 - 316 ATyS (Specific Voltage Supply)				
Remote Interface	RJ	Output to D10 remote display module	Up to 3m	RJ 45 straight cable		

Denomination	Terminal	Status of the contact	Contact	Description	Characteristics	Recommended Cable Section			
		Mains - Mains		No	t used	ed			
	207 - 208	Mains -		Test Off Load Start: TOF					
		Genset	_/_	Test Off Load Stop					
		Mains -	_/L	Priority to Source 2 (If 413- 417 is open)	Do not connect to any power supply. Attn.: To be used with	1.5. 0.5 mm0			
	207 - 209	Mains	/_	Priority to Source 1 (If 413- 417 is open)	dry contacts fed from 207 ONLY.	1,5 – 2,5 mm2			
	207 200	Mains -		Test On Load Start: TON					
		Genset	_/_	Test On Load Stop					
	210			Not used	t used				
ATS Module		Mains -		Without priority					
Control Inputs	413 - 417	Mains	_/_	With priority					
		Mains - Genset	_/L	Priority to Test On Load					
	44.4.44.7	Mains - Mains	_/L	Activation of the DTC function	Do not connect to any				
	414 - 417	Mains - Genset	_/L	S2 Stability Timer (2AT) bypass	power supply. Attn.: To be used with dry contacts fed from	1,5 – 2,5 mm2			
	415 - 417	Mains - Mains and	_/L	Manual retransfer	417 ONLY.				
		Mains - Genset	/_	Automatic retransfer					
	416 - 417	Mains - Mains and	_/L	Automatic mode inhibition					
		Mains - Genset	_/_	AUTO Mode					
MODBUS Module (Optional)	0 - +	RS485 M	ODBUS Comr	nunication module terminals					


^{*}For metering and sensing details, please refer to page 40.




CAUTION! Do not connect terminals 312 to 317, 413 to 417 or 207 to 209 to any power supply. These order inputs are powered through terminal 207 (317 or 417 respectively) and external dry contacts ONLY


7.4. Voltage sensing and power supply kit

The ATyS g voltage sensing kit is available as an accessory and is designed to tap directly of the power section on Switch I and Switch II terminals without the need to add protection fuses. The sensing kit is designed with optimised cable lengths and utilises silicon conductors held safely in an isolated mechanical support.

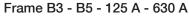



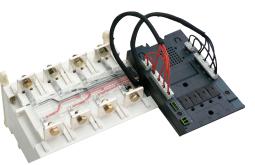

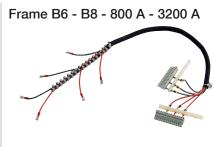


 \triangle

CAUTION! Ensure to mount the kit onto the product before connecting the power cables. Be careful not to damage the contacts during kit mounting and during power cables connections (Tighten the cables carefully).

7.4.1. Standard configuration

The sensing and power supply kit may be ordered in 3 phases network 4 wires or 3 wires.

It can be used with top or bottom cables entry. The only connection to respect is that measures of the source on Switch I must be connected to the inputs located on the right of the electronic module and the measures of the source on Switch II must be connected to the inputs located on the left of the electronic module.

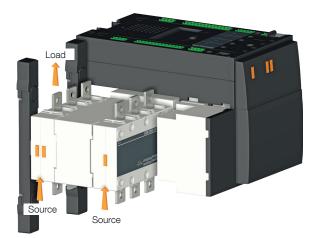



CAUTION!

Pay attention when wiring the power cables (Respect to the sensing kit legend). 3 wire kits (those without a neutral) do not include for the power supply to terminals (101-102 and 201 – 202).

Ensure that you have ordered the correct reference prior to installation. (Refer to the accessory section for details).


7.4.2. Sensing kit wiring diagram (standard)

Bottom incoming with Top Outgoing

- Black Wires -> Switch I
- Red Wires -> Switch II

Top Incoming with Bottom Outgoing

- Black Wires -> Switch II
- Red Wires -> Switch I

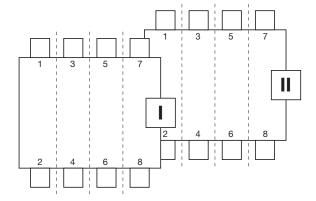

Wiring numbers:

Wire numbering has been determined in accordance to the power switch terminals


Example:

Black and red wire numbers 1-2 are always connected to terminals 1 or 2 from switch I or II

CAUTION! Verify kit orientation before mounting the kit.

Kit output cables always on the right hand side (control module side).

≥ 800 A Bottom view

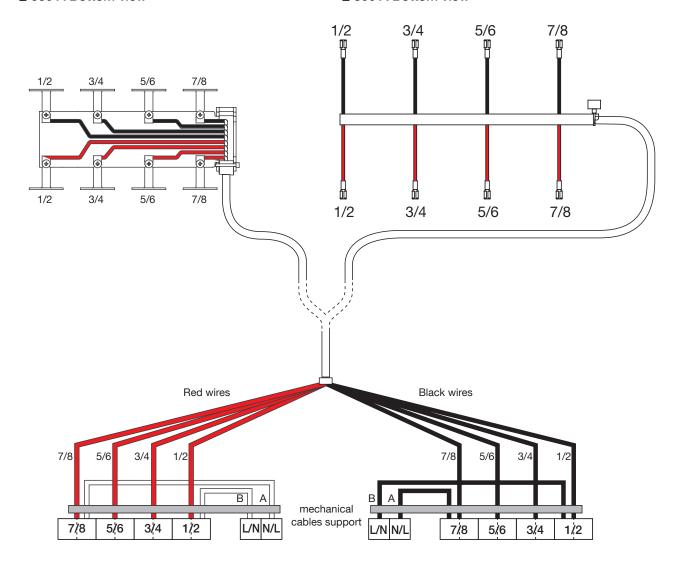

7.4.3. Network


Power inputs (terminals 101-102 & 201-202) are 220/240/277 VAC (208 - 277VAC) \pm 20%. It is necessary to adapt the power input cable connections according to the network configuration. (Power supply to be taken between phase to phase or between phase and neutral).



CAUTION ! Verify that the power supply between terminals 101 – 102 and 201 – 202 (nominal auxiliary voltage supply) is within 208-277 VAC \pm 20%


• Standard kit:

Network 380/415 VAC \pm 20% with neutral conductor (no kit modification required):

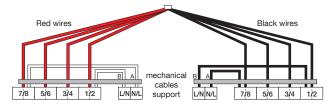

• Kit Modification:

For network 220/240 VAC \pm 20%, power supply cables A-B to connect between phases

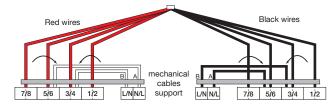

8. ATYS G OPERATING MODES AND SEQUENCES

The ATyS g includes 3 safe and distinct operating modes through a selector switch located on the front of the product. As standard the ATyS g is delivered with a selector switch however a key lock type selector swith is available as accessory.

The modes of operation are as follows:

• Auto Mode: "Remotely operated transfer switching"

Manual Mode: "Local emergency manual operation"Locked Mode: "Secure locked padlocking facility"








AUTO MODE:

- Activates the remote control inputs and the ATS controller automation.
- Inhibits the padlocking facility
- Inhibits the insertion of the manual operation handle when in AUT Mode

AUTO Mode position is inhibited when padlocked or when the handle for manual operation is inserted into the ATyS p.



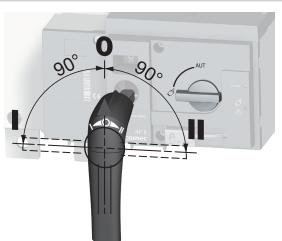



MANUAL MODE: (Not Padlocked)

- Inhibits the control inputs.
- Allows to insert the handle for emergency manual operation.
- Allows padlocking in O Position. (With the handle for manual operation removed)

Turning the selector switch to from AUT and back to AUT resets a fault state.





MODE





MANUAL MODE: (Padlocked)

- Inhibits the control inputs.
- Inhibits insertion of the emergency handle.
- · Allows padlocking when in O Position.





POS 0

Padlocking in position I - O and II is possible when the optional function is included in the ATyS p. (Refer to product catalogue)



WARNING! Depending on the state of the ATyS p the ATS automation may change the switch position as soon as the mode selector is switched to AUT. This is a normal operation.

8.1. Manual Operation


8.1.1. Emergency manual operation

The ATyS g can be manually operated as a "Manual Transfer Switch Equipment – MTSE" whilst retaining the electrical characteristics and performance of the power switching function. This function is usually used in case of emergencies or during maintenance.

To operate the ATyS g manually ensure that no live parts are accessible, turn the front selector switch into the manual position (see page 18) and insert the handle (see page 18) into the emergency handle shaft location hole provided (see page 19).

Turn the handle 90° clockwise or anti-clockwise (depending on the position to be reached) for each consecutive change in position. $I \to O \to II \to O \to I$.



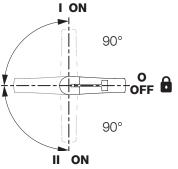

A CAUTION!

Ensure to verify the product position and direction of rotation before effecting manual operation.

Ensure to remove the handle from the product before changing the selector switch back to AUT position.

8.1.2. Padlocking

The ATyS g can be padlocked in the 0 position as standard whilst padlocking in positions I, O or II is available as a factory fitted option.

To padlock the ATyS g first ensure that the ATyS g mode selector switch is on Manual then ensure that the emergency manual operation handle is not inserted into the location hole. (Remove if inserted).

Pull the padlocking mechanism outwards to reveal the slot for inserting up to 3x dia. 4 - 8mm padlocks.

Padlock the device with approved quality padlocks of minimum diameter 4mm and maximum diameter of 8mm. A maximum of 3x 8mm padlocks may be padlocked onto the ATyS g to padlocking mechanism.







 \bigwedge

CAUTION! As standard, padlocking is only made possible in the "O position", when in manual mode and with the emergency handle not inserted.

8.2. Electrical operation

8.2.1. Dual power supply

The ATyS g includes a dual power supply and is to be powered between terminals 101 - 102 and 201 - 202 (2 different supplies - main & alternative) within the limits of: 2x 208 - 277 VAC ± 20% / (166 - 332 VAC) / 50/60Hz ± 10%.

Current Input: 100mA (Standby mode) / 15A max (Switching mode) Surge Protection: Vin sq: 4.8KV - 1.2/50µs according to IEC 61010-1

Terminal connectors: Minimum 1.5mm² / Maximum 2.5mm²



8.2.2. Voltage sensing inputs

The ATvS a includes dual single phase and three phase voltage sensing (terminals 103 - 106 and 203 - 206) designed to monitor 1Phase (L-N) supplies of up to 332VAC and 3 phase (L-L) of up to 575/600VAC.

The ATyS g is designed to handle single phase, three phase with neutral as well as three phase without neutral networks. Simply define the correct configuration of single or three phase and with or without neutral using dip switches (position A/B, C/D) on the front of the ATS controller.

Sensing connections are usually tapped directly off the ATyS g power terminals using the ATyS sensing kit available as an accessory. Sensing kits are available with the neutral on the left or neutral on the right to match the network configuration where the ATyS will be operating. Refer to the ATyS accessory section for more details.

Sensing values measured will have a direct influence on determining the availability of the main and the alternative supplies as well as the ATyS g automation.

The parameters monitored through sensing are the following:

Phase rotation / imbalance (3 phase networks)

Phase imbalance in the ATyS g is relative to the nominal voltage configured with "Auto Conf" or with the preset values on potentiometer 1 together with the voltage hysteresis value as set using Potentiometer 2.

· Frequency within set limits

This will depend on the nominal frequency configured using auto conf or preset values on potentiometer 1 together with the hysteresis set using Potentiometer 2.

Loss of Neutral

When used on three phase + neutral applications (configured with dip switch 1 set on position A and dip switch 2 set on position C, the loss of neutral will be detected for most unbalanced loads. Detection will be done when the load is on.


Loss of the main or alternative supply

Loss of supply depends on the nominal voltage and frequency configured together with the hysteresis set in potentiometer 2. The supply will be considered as failed after the failure timer (set through potentiometer 3) FT on the ATS controller) has elapsed. The FT setting is adjustable from 0 – 60 seconds.

• Return of main and / or alternative supply

Return of supply depends on the nominal voltage and frequency configured together with the hysteresis set. The supply will be considered as returned after the return timer (set through potentiometer 4) RT on the ATS controller has elapsed. The RT setting is adjustable from 0 – 60 minutes.

Measurement accuracy: Frequency: 0.1% - Voltage: 1%

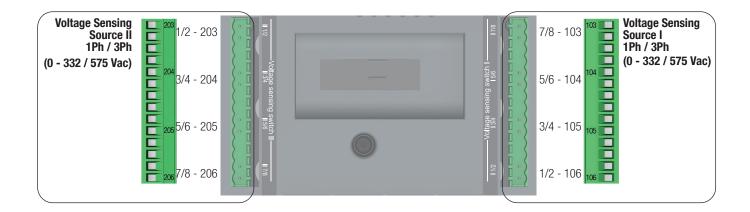


8.2.3. Fixed inputs

8.2.3.1. Description

The ATyS g includes for 5 off inputs through a 6 pin connector installed on the motorisation module. No additional power supply should be used on these contacts as the inputs MUST be used with the common supply taken from terminal 317.

The ATyS g also includes 4 additional inputs on the ATS Control Module. Again no additional power supply should be used on these contacts as the inputs MUST be used with the common supply taken from terminal 417. At least one of the ATyS g aux power supplies (101 – 102 or 201 - 202) must be available to activate inputs 312 to 317.

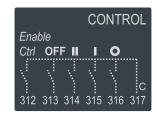

Pulse duration for activation of contact inputs: \geq 60ms.

• Pin 312: Remote Control Mode Enable when closed with 317.

This contact must be closed with 317 so as to activate all control inputs except for 313 that takes priority and is active immaterial of the state of input 312. Enabling remote control through 312 activates the remote control inputs whilst inhibiting the ATS module automation.

• Pin 313: Position 0 order if closed with 317 when in AUTO. (Force the switch to the OFF Position).

This is a "Priority Order Input" meaning that when closed with 317 it takes priority over all other electrical commands. The ATyS g will remain in 0 position as long as the contact 313 – 317 remains closed. Once the contact is open the ATyS g is ready to receive new orders. This contact order is independent of other inputs and is also enabled without 312 connected to 317. Impulse duration to activate and start switching to position O is a minimum of 60ms. The product state will be unavailable.

• Pin 314: Position II order if closed with 317.

This contact is active with the ATyS g in AUT mode with contact 312 – 317 closed and 313 – 317 open. Impulse duration to activate and switch to position II is a minimum of 60ms.

• Pin 315: Position I order if closed with 317.

This contact is active with the ATyS g in AUT mode with contact 312 – 317 closed and 313 – 317 open. Impulse duration to activate and switch to position I is a minimum of 60ms.

• Pin 316: Position 0 order if closed with 317.

This contact is active with the ATyS g in AUT mode with contact 312 – 317 closed and 313 – 317 open. Impulse duration to activate and switch to position O is a minimum of 60ms. For contactor logic maintain contacts on between terminal 316 and 317.

• Pin 317: Common

Common supply for inputs 312 to 316

- Pin 413: Input I1, Activate priority to TON/EON when closed with 417.
- Pin 414: Input I2, S2 Stability Timer (2AT) bypass when closed with 417.

This input contact is used to bypass the stability timer immaterial of the state of source supply 2.

Attn: If the ATyS g auxiliary power supply is powered, this input will allow to changeover to Switch 2 even when source supply 2 is unavailable.

• Pin 415: Input I3, Manual Retransfer

RTC – Manual retransfer inhibits the "with priority" configuration order when closed with 417. This allows to control the retransfer back to the priority supply at a specific (less consequent) moment. This input is useful when using the "with priority" function.

• Pin 416: Input I4, Inhibition

This input contact inhibits the ATS automation when closed with 417 without activating any other operating modes. With inhibition active, the ATyS g may be operated in manual mode (with the direct handle) or in remote control mode with contacts 312 - 317 closed.

• Pin 417: Common

Common supply for fixed inputs 1 – 4 on terminals 413 to 416.

8.2.3.2. Technical data

	Motorisation Module	ATS Control Module
Input Qty	5	6
Direct Current lin	0.35 to 0.5mA	1 to 2.5mA
Line resistance	1kΩ	1kΩ
Line length	100m (Min. wire 1.5mm ² #16AWG)	100m (Min. wire 1.5mm ² #16AWG)
Pulse duration	60ms	60ms
Power per Input	0.06VA	0.03VA
Surge protection Vin_sg	4.8kV (1.2/50µs surge)	2.4kV (1.2/50µs surge)
ESD withstand voltage (Contact/air)	2/4kV	2/4kV
Insulation (Common mode)	4.8kVAC (Between I/P and all	4.8kVAC (Between I/P and all
	common parts)	common parts)
Terminal connector	1.5mm² minimum / 2.5mm² max	1.5mm ² minimum / 2.5mm ² max

8.2.3.3. Remote control logic

Remote switching operation can be driven in AUT mode by external volt free contacts as described above using input contacts 312 to 317.

Depending on the wiring configuration there are two types of logic that may be applied to the ATyS g.

- Impulse logic or
- · Contactor logic.

In remote control, the ATyS g inputs give priority to orders I and II over 0 therefore contactor logic can be implemented by simply bridging terminals 316 and 317.


Impulse logic: Impulse logic The ATyS g is driven to a stable position (I - O - II) after receiving an impulse order I order. order 0 • A switching command of at least 60 ms is necessary to initiate the order II switching operation. • Orders I and II have priority over order 0. position position 0 position II Imp. ≥60ms Note: The logic diagrams exclude the transfer times. (Note: Excludes position switching delays) **Contactor Logic:** Contactor logic The ATyS g is driven to a specific position (I or II) for as long as the order is order I maintained. order 0 • Order O is maintained. (Bridge 316 – 317) order II • Orders I and II have priority over order 0. • Orders I and II have equal priority. position I (1st order received is held until no longer maintained). position 0 • If order I or II disappears, the device returns to zero position. position II (With the power supply available). maintened (Note: Excludes position switching delays)

8.2.4. Fixed outputs - Dry contacts

8.2.4.1. Description

As standard, the ATyS g is equipped with four fixed outputs located on the motorisation module.

(Dry contacts to be powered by the user).

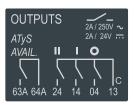

8.2.4.2. Position auxiliary contact

The ATyS g is equipped with integrated position (I – O – II) auxiliary contact outputs through 3 off micro switches.

Pins 13, 04, 14, 24

(Normally Open contacts with pin 13 as common)

8.2.4.3. ATyS g Product available output (motorisation)

Pin 63A - 64A

(Normally Open contact that is held closed when the motorisation is available).

This contact gives constant feedback about the product's availability and it's capacity to transfer from the main supply to the alternative. The feedback given is relative to the motorisation module excluding the ATS controller that may be monitored separately.

The ATyS g performs a self diagnostics test on the motorisation module at startup, when put from Manual -> Auto and then every 5 minutes. This test ensures that the ATyS g is operational in terms of control inputs. Should one of the tests fail, a second test is performed to reconfirm the error state.

Should the ATyS g motorisation module become unavailable, contact 63A - 64A are opened, the power/ready LED's are switched off, and the fault LED is activated. The fault LED will remain active for as long as sufficient power is available and the fault condition is not reset. The fault is reset when the product is switched from AUT -> Manual -> Auto mode.

ATyS g (Motorisation) Product Available / Unavailable Watchdog relay will open for any of the following reasons below: For added security, "Product Availability" is informative and does not necessarily inhibit motor operation.

Product Unavailable + Warning LED Condition:	Inhibition
Product in manual mode	Yes
Motor not detected (Autotest)	No
Control voltage out of range	Yes
Operating factor fault active (N° of operations / min)	Yes
Powerfail active	Yes
Customer input autotest failed	No
Invalid product customisation	No
Abnormal switching when not in manual mode	Yes
Requested position not reached	Yes
Locked mode active when not in manual mode	Yes
External Fault -> User input	No
Unexpected current flowing through the motor when idle	Yes

Sampling rate for the above is every 10 ms

Exception: motor detection sampling rate is every 5 min

Pin 63B - 64B

ATyS g Product Available Output (ATS module) (Normally Open contact that is held closed when the ATS is available)

The above contacts may be used separately for precise monitoring of the state of each module or wired in series to monitor the availability of the ATS and motorisation modules as a complete unit.




8.2.4.4. Technical data

Auxiliary Contact Quantity	4
Configuration	NO
Mechanical Endurance	100k cycles
Response Time	5 – 10 ms
Startup duration	200ms
Rated Voltage / Switching Voltage	250VAC
Rated Current	2A
Surge protection Vin_sg:	4.8kV (1.2/50µs surge)
ESD withstand voltage (Contact/air):	2/4kV
Dielectric Strength contact/parts:	4.8kVAC (Reinforced Insulation)
Insulation:	4.8KVAC
Output Terminal:	1.5mm² minimum / 2.5mm² maximum

8.2.5. Specific compressors control - DTC Function

It allows using a StartGen output in Main-Main mode to correctly stop the HVAC compressors before switching back to priority source. This function can be activate through 414-417 contacts in Main-Main mode.

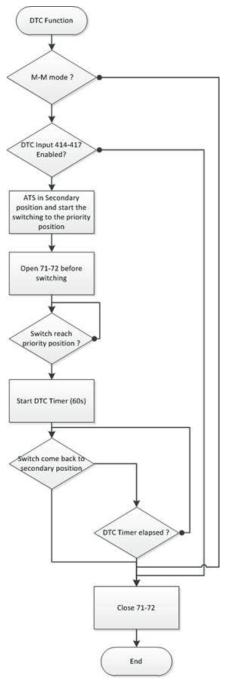

8.3. Operating Sequences

The given times are: operating transfer time, product opening time and contact transfer time. The definitions of these times are given below:

1. Operating transfer time (OTT) - IEC 60947-6-1 §3.2.6

This time is measured from the instant the monitored supply deviates (not considered as available anymore) to the closing of main contacts on an available alternative supply source, exclusive of any purposely introduced time delay. In other words, this is the global transfer time, excluding all programmable delays (timers configured to 0).


If the supply deviation is not monitored by the product itself, but by an external controller, OTT time starts when the order is received by the product.

2. Product opening time I-0 or II-0 (POT)

This time is measured from the instant that the monitored supply is not considered as available to the opening of the main contacts, exclusive of any purposely introduced time delay. If the product is controlled via external orders, this time is measured from the moment when the order is received to the opening of the main contacts.

3. Contact transfer time (CTT) - IEC 60947-6-1 §3.2.5

This time is measured from the parting of one set of main contacts from one power supply to the closing of a second set of main contacts on an alternative power supply; this is the duration between the opening of the contacts on the initial position and the closing of the contacts on the position reached, in other words, it is the time in 0 (disconnection time).

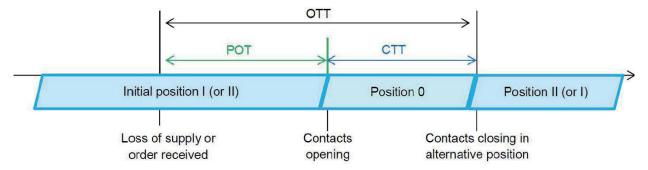

Mean switching times at nominal voltage and frequency – 25°C:

	125 A 160 A 200 A	250 A 315 A 400 A	500 A 630 A	800 A 1000 A 1250 A	1600 A	2000 A 2500 A 3200 A
Contact transfer time ("electrical blackout") I-II - CTT	0.4s	0.4s	0.4s	1.4s	1.4s	1.1s
I-0 or II-0 following an order - POT	0.54s	0.56s	0.56s	1.4s	1.4s	1.3s
Operating transfer time I-II or II-I, following an order - OTT	0.94s	0.96s	0.96s	2.8s	2.8s	2.4s
I-0 or II-0 following source's loss or return - POT	0.75s	0.73s	0.74s	1.7s	1.5s	1.5s
Operating transfer time I-II or II-I, following source's loss or return - OTT	1.1s	1.1s	1.1s	3.1s	2.9s	2.6s


EN 55 ATYS g - 541998E - SOCOMEC

8.4. Programming

The ATyS g is to be programmed after wiring verification tests through the front of the ATS Controller.



Front of ATS Controller

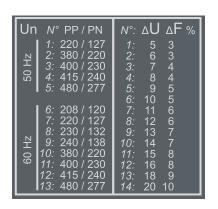

Selection chart to identify the Un and $\Delta U \Delta F$ potentiometer positions. Steap 2.

Programming is carried out in 5 easy steps:



Note: Ensure that the ATyS g is in "Manual Mode" with the auxiliary and network supplies available.

- **STEP 1: SET** the Dip Switch positions from "A to H" as required. (4 Dip Switches for configuration settings). Note: The READY LED will Flash.
- STEP 2: SET the potentiometers paying attention to the arrow indication. (4 Potentiometers with 14 stable positions. Un, ΔU ΔF, FT, RT)
- STEP 3: Only if Auto Conf is selected. **READ** the network voltage and frequency. (Press the PROG OK button for >2 seconds to read the network values)
- STEP 4: SAVE all the configured setting values. (Potentiometers, Dipswitches and Auto Conf. (Press the PROG OK button momentarily to save: <60ms) Note: The READY LED will stop flashing (OFF).
- STEP 5: To put the unit in service Switch the ATyS g to AUT mode after STEP 4. Note: The READY LED should turn to a Steady Green light.



Programming cycle: 5 steps.

Attn: As a safety measure the READY LED will flash when any of the settings shown on the controller are different to those that are saved. To return to the steady READY LED revert to the saved setting values or switch to manual mode and save the displayed value by pressing the PROG OK button briefly.

(This is intended as a visual alarm in case one has changed the configuration settings but has not yet saved the new values in the product)

For added security:

The ATyS g may be equipped with a sealable cover so as to limit access to the configuration settings.


Refer to the product accessory section for details.



8.4.1. Step 1: ATyS g Dip Switch Setting Options

Ensure that the product is in manual mode and SET the 4 Dip Switches using a small screw driver. Possible variants vary from positions "A to H" as described in the table below. For convenience, the position functions are also described on the front of the ATS controller adjacent to the dip switches.

Note: The READY LED will flash green as soon as settings are changed and until the new settings have been saved by pressing the PROG OK button momentarily.

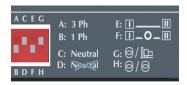




Dip Switch Se	ettir	ng Options
Dipovitob 1	Α	Three Phase Network
Dipswitch 1 A / B	В	Single Phase Network (Attn: Dipswitch 2 is inactive in this position)
Dipswitch 2 C / D	С	Three Phase 4 wire Network (Including Neutral) (Allows to detect a loss of neutral for unbalanced loads)
C/D	D	Three Phase 3 wire Network (Without Neutral)
Dipswitch 3	Е	Load supply down time of 0 second (0DT = 0 sec)
E/F	F	Load supply down time of 2 seconds (0DT = 2 sec) ⁽¹⁾
Dipswitch 4	G	Main - Generator Application
G/H	Н	Main - Main Application


⁽¹⁾ When a transfer is initiated after a loss of source, the 2s time delay is counted down from the loss of source.

8.4.2. Step 2: ATyS g Potentiometer Setting Options

Ensure that the product is in manual mode and SET the 4 potentiometers using a small screw driver paying attention to the arrow indicating the position. There are a total of 14 positions for which the specific settings are described in the table below. For convenience, a table is also included on the ATS controller.

Note: The READY LED will flash green as soon as settings are changed and until the new settings have been saved by pressing the PROG OK button momentarily.

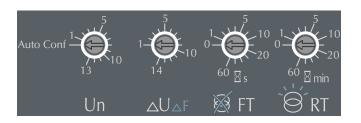

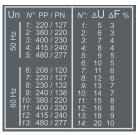

Refer to the selection chart to identify the Un and $\Delta U \Delta F$ potentiometer position values.



WARNING! It is IMPERATIVE to configure Pots 2 to 4 even if Pot 1 is set.

Potenti	omter	Configura	Configuration												
	Position	Auto Conf	1	2	3	4	5	6	7	8	9	10	11	12	13
Un	PP / PN	Mesured	220 / 127V	380 / 220V	400 / 230V	415 / 240V	480 / 277V	208 / 120V	220 / 127V	230 / 132V	240 / 138V	380 / 220V	400 / 230V	415 / 240V	480 / 277V
	F	Mesured			50Hz						60	Hz			
	Position	1	2	3	4	5	6	7	8	9	10	11	12	13	14
Δυ/ΔΕ	U threshold in % of Un	5%	6%	7%	8%	9%	10%	11%	12%	13%	14%	15%	16%	18%	20%
Δυ/ΔΓ	F threshold in % of Fn	3%	3%	4%	4%	5%	5%	6%	6%	7%	7%	8%	8%	9%	10%
	Hysteresis	20% of ΔU/ΔF settings													
FT*	Source Failure Timer	0 sec	1 sec	2 sec	3 sec	4 sec	5 sec	8 sec	10 sec	15 sec	20 sec	30 sec	40 sec	50 sec	60 sec
RT*	Source Return Timer	0 min	1 min	2 min	3 min	4 min	5 min	8 min	10 min	15 min	20 min	30 min	40 min	50 min	60 min

^{*} RT and FT values are set for Source 1, these values apply to Source 2 only when in Mains-Mains application.

Functional Description							
Potentiometer 1	Un	Pos N° 0 = Auto Configuration position Pos N° 1 to 13 = Preset Volt and Hz Config.					
Potentiometer 2	ΔU ΔF	Delta U : Adjustable from 5 to 20% Delta F : Adjustable from 3 to 10%					
Potentiometer 3	FT	Supply Source Failure time: 0 to 60s					
Potentiometer 4	RT	Supply Source Return Time : 0 to 60 min					




WARNING! Source 2 timers are fixed and cannot be user configured.


Configuration used for these example chronograms:

- Source 1 is set on position 1, and Source 2 is set in position 2.
- Source 2 genset cool down timer (2CT) is set 4 minutes.
- Source 2 Failer timer (2FT) is set to 5 seconds.
- Source 2 (Genset) Availibility Timer (2AT) is set to 5 seconds.

Loss and return of source 1 with source 1 priority

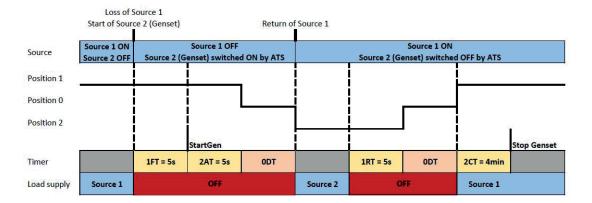

Loss and return of source 2 with source 2 priority

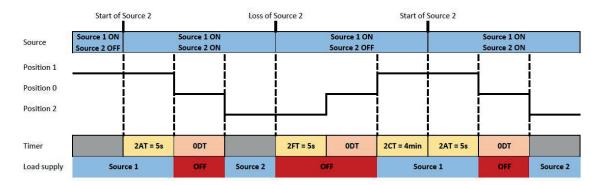

If your application needs a specific configuration on source 2 use the ATyS p Version (page 9).




WARNING! Source 2 timers are fixed at the same values as Source 1 (using the FT and RT potentiometers).


Configuration used for these example chronograms:

- Source 1 is set on position 1, and Source 2 is set in position 2.
- Source 2 Failure timer (2FT) is set to the value selected by the FT potentiometer.
- Source 2 Return timer (2RT) is set to the value selected by the RT potentiometer.

Loss and return of source 1 with source 1 priority

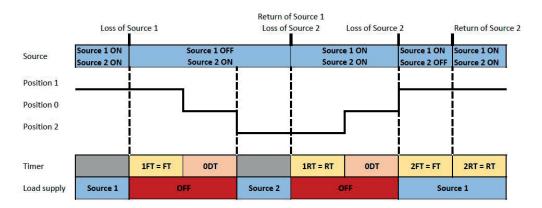

Loss and return of source 2 with source 2 priority

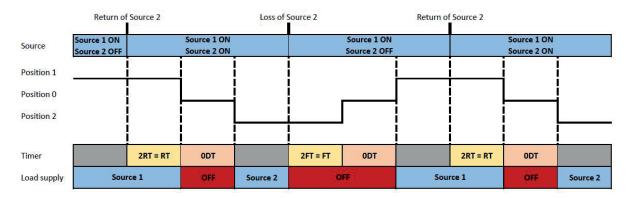

If your application needs a specific configuration on source 2 use the ATyS p Version. (page 9)


8.4.3. Step 3: ATyS g Auto Configuration


The ATyS g includes an "Auto Configuration feature to detect the mains voltage, phase rotation, neutral position and frequency nominal values and save them in the ATS controller.

Note: The voltage and frequency values may also be configured using potentiometer 1 in any suitable preset position as described in STEP 2.

Before configuring the nominal values ensure that the product is properly wired, verified and ready for commissioning. It is imperative that the network supply is available and that the wiring to the ATyS g voltage sensing terminals 103 - 106 has been done. It is preferable to use the ATyS sensing kit that may be provided as an accessory.



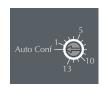

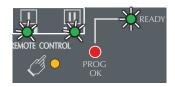

- Ensure that the product is in manual mode and set potentiometer 1 to the "Auto Conf" position.
- Press and hold the Red "PROG OK" button for >2s to measure the supply voltage, frequency, phase rotation and neutral position.

Note 1: The READY LED will flash green (on and off) as soon as settings are measured and until these settings have been saved by pressing the PROG OK button a second time momentarily. (Refer to STEP 4).

Note 2: When potentiometer 1 is not in the Auto Conf position (in other words when Voltage and Frequency are defined using positions 1 to 13) you may ignore this step.

Ensure to have both source supplies available to verify phase rotation on both source I and source II.

8.4.4. Step 4: Saving the configured values

To SAVE the recorded setting configuration press the PROG OK button momentarily: <60ms.

Note: The flashing READY LED goes off once the values are saved in the ATS controller.





8.4.5. Step 5: Putting the ATyS g into auto operation


After following Steps 1 to 4, and once ready to put the ATyS g into AUTO operation turn the mode selector switch to Auto.

Note: When the product is powered and properly configured, after switching the product from Manual Mode to Auto Mode the POWER and READY light should be a steady Green light.







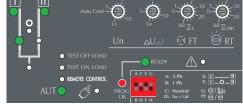



WARNING! Depending on the state of the ATyS g the ATS automation may change the switch position as soon as the mode selector is switched to AUT. This is a normal operation.

9. COMMUNICATION

One can benefit of all the ATyS g functionality when including MODBUS RTU over RS485 communication module.

9.1. General information


Communication via an RS485 connection (MODBUS® protocol) enables you to connect up to 31 ATyS to a PC or programmable logic controller over a distance of 1200 metres.

To authorise a change in configuration: define adress HEXA E300 as 1000.

Recommendations:

Use a shielded twisted pair, type LIYCY. If the distance of 1200 m and / or the number of 31 ATyS be exceeded, it will be necessary to connect a repeater to allow a connection of ATyS for over 1200 m.

For further information on the connection methodology, please consult SOCOMEC.

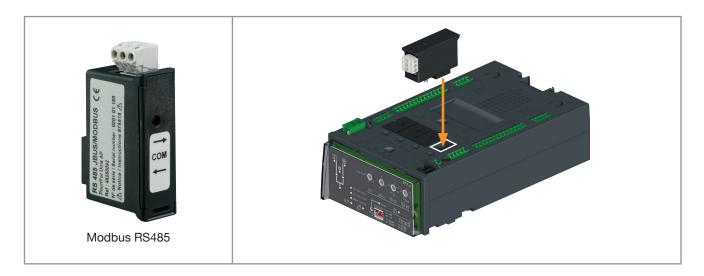

9.2. MODBUS® protocol

The MODBUS® protocol used by the ATyS requires a dialogue using a master/slave hierarchical structure. Two dialogues are possible:

- the master communicates with a slave (ATyS) and waits for its response,
- the master communicates with all the slaves (ATyS) without waiting for their response.

The communication mode is RTU (Remote Terminal Unit) which uses hexadecimal 8 bit characters. In the communication protocol, a standard frame is made up of the following elements:

Slave address Function code Address Data CRC 16

- Slave address: communicating device address
- Function codes:
 - 3: to read n words (maximum 125)
 - 6: to write one word.
 - 16: to write n words (maximum 125).
- Address: Register address (refer to Annexe I page 73 for communication address and designation details)
- Data: parameters linked to function (number of words, value).

 When slave address 0 is selected, a message is sent to all devices present on the network (only for functions 6 and 16), this type of message is called general distribution, so it is not followed up with a response from the slaves. The maximum response time (timeout) is 250 ms between a question and a response.

10. CHARACTERISTICS

Characteristics according to IEC 60947-3 and IEC 60947-6-1

125 to 630 A

Thermal current I _{th} to 40°C		125 A	160 A	200 A	250 A	315 A	400 A	500 A	630 A
Frame size		B3	В3	В3	B4	B4	B4	B5	B5
Rated insulation voltage U _i (V) (power circuit)		800	800	800	1000	1000	1000	1000	1000
Rated impulse withstand voltage U _{imp} (kV) (pow	er circuit)	8	8	8	12	12	12	12	12
Rated insulation voltage U _i (V) (control circuit)			300	300	300	300	300	300	300
Rated impulse withstand voltage U _{imp} (kV) (cont	rol circuit)	4	4	4	4	4	4	4	4
Rated operational currents I _e (A) accord	ling to IEC 60947-3				•			•	
Rated voltage	Utilisation category	A/B ⁽¹⁾	A/B ⁽¹⁾						
415 VAC	AC-21 A / AC-21 B	125/125	160/160	200/200	250/250	315/315	400/400	500/500	630/630
415 VAC	AC-22 A / AC-22 B	125/125	160/160	200/200	250/250	315/315	400/400	500/500	630/630
415 VAC	AC-23 A / AC-23 B	125/125	160/160	200/200	200/200	315/315	400/400	500/500	500 /630
500 VAC	AC-21 A / AC-21 B	125/125	160/160	200/200	250/250	315/315	400/400	500/500	630/630
500 VAC	AC-22 A / AC-22 B	125/125	160/160	200/200	200/250	200/315	200/400	500/500	500/500
500 VAC	AC-23 A / AC-23 B	80/80	80/80	80/80	200/200	200/200	200/200	400/400	400/400
690 VAC ⁽³⁾	AC-21 A / AC-21 B	125/125	160/160	200/200	200/200	200/200	200/200	500/500	500/500
690 VAC ⁽³⁾	AC-22 A / AC-22 B	125/125	125/125	125/125	160/160	160/160	160/160	400/400	400/400
690 VAC ⁽³⁾	AC-23 A / AC-23 B	63/80	63/80	63/80	125/125	125/125	125/125	400/400	400/400
220 VDC	DC-21 A / DC-21 B	125/125	160/160	200/200	250/250	250/250	250/250	500/500	630/630
220 VDC	DC-22 A / DC-22 B	125/125	160/160	200/200	250/250	250/250	250/250	500/500	630/630
220 VDC	DC-23 A / DC-23 B	125/125	125/125	125/125	200/200	200/200	200/200	500/500	630/630
440 VDC ⁽²⁾	DC-21 A / DC-21 B	125/125	125/125	125/125	200/200	200/200	200/200	500/500	630/630
440 VDC ⁽²⁾	DC-22 A / DC-22 B	125/125	125/125	125/125	200/200	200/200	200/200	500/500	630/630
440 VDC ⁽²⁾	DC-23 A / DC-23 B	125/125	125/125	125/125	200/200	200/200	200/200	500/500	630/630
		120/120	120/120	120/120	200/200	200/200	200/200	000/000	000/000
Rated operational currents I _e (A) accord		I							
Rated voltage	Utilisation category	105	100	000	050	0.15	400	F00	000
415 VAC	AC-31 B	125	160	200	250	315	400	500	630
415 VAC	AC-32 B				200	315	400	500	500
415 VAC	AC-33 B				200	200	200	400	400
Current rated as conditional short-circu	-								
Prospective fuse protected short-circuit withsta	nd at 415 VAC(6)	100	100	50	50	50	50	50	50
Prospective fuse protected short-circuit withsta	nd at 690 VAC(kA rms)				50	50	50	50	50
Associated fuse rating (A)		125	160	200	250	315	400	500	630
Short-circuit withstand without protect	on as per IEC 60947-3								
Rated short-time withstand current 0.3s I cw at 4	15 VAC (kA rms)	12	12	12	15(4)	15 ⁽⁴⁾	15 ⁽⁴⁾	17 (4)	17 (4)
Rated short-time withstand current 1s I _{cw} at 415	5 VAC (kA rms)	7	7	7	8 (4)	8 (4)	8 (4)	11 (4)	10 (4)
Rated peak withstand current at 415 VAC (kA p	eak)	20	20	20	30	30	30	45	45
Short-circuit withstand without protect	on as per IEC 60947-6-	1							
Rated short-time withstand current 30 ms I and at		10	10	10	10	10	10		
Rated short-time withstand current 60 ms l								10	12.6
Connection	(-,				1				
	0.47 1 (mm²)	35	35	50	95	120	185	2 × 05	2 x 120
Minimum Cu cable cross-section as per IEC 60 Recommended Cu busbar cross-section (mm²)		33	33	30	90	120	100	2 x 95 2 x 32 x 5	2 x 40 x 5
Maximum Cu cable cross-section (mm²)		50	95	120	150	240	240	2 x 32 x 3	2 x 40 x 5
		25	25	25	150	32	32	50	50
Maximum Cu busbar width (mm)									
Min./max. tightening torque (Nm)		9/13	9/13	9/13	20/26	20/26	20/26	40/45	40/45
Switching time (rated voltage, after rec	eiving command)		ı						
Transfer time I-II or II-I (s)		0.85	0.85	0.85	0.9	0.9	0.9	0.95	0.95
I-0 or II-0 (s)		0.55	0.55	0.55	0.5	0.5	0.5	0.55	0.55
Contact transfer time ("black-out" I-II) minimum	(S)	0.3	0.3	0.3	0.4	0.4	0.4	0.4	0.4
Power supply									
Min./max. power (VAC)		166/332	166/332	166/332	166/332	166/332	166/332	166/332	166/332
Control supply power demand									
Demand/rated power (VA) - ATyS r, ATyS d		184/92	184/92	184/92	276/115	276/115	276/115	276/150	276/150
Demand/rated power (VA) - ATyS t, g, p		206/114	206/114	206/114	298/137	298/137	298/137	298/172	298/172
				2007111				200,112	
Mechanical specifications		10.000	10.000	10.000	0.000	0.000	0.000	F 000	F 000
Durability (number of operating cycles)		10,000	10,000	10,000	8,000	8,000	8,000	5,000	5,000
Weight ATyS r 3 P / 4 P (kg)		5.7/6.9	5.7/6.9	5.7/6.9	6.6/7.4	6.7/7.8	6.7/7.8	1	11.9/ 14.0
Weight AT/S t a p 2 D (4 D (c))		6.3/7.5	6.3/7.5	6.3/7.5	7.2/8.0	7.3/8.4	7.3/8.4		12.5/ 14.6
Weight ATyS t, g, p 3 P / 4 P (kg)		6.8/8.0	6.8/8.0	6.8/8.0	7.7/8.5	7.8/8.9	7.8/8.9	12.5/ 14.4	13.0/ 15.1

⁽¹⁾ Category with index A = frequent operation - Category with index B = infrequent operation.
(2) 3-pole device with 2 pole in series for the "+" an 1 pole for the "-".
4-pole device with 2 poles in series by polarity.

⁽³⁾ Interphase barriers must be installed on the products. (4) Values given at 690 VAC.

800 to 3200 A

Thermal current I _{th} at 40°C Frame size		800 A B6	1000 A B6	1250 A B6	1600 A B7	2000 A B8	2500 A B8	3200 A B8
Rated insulation voltage U _i (V) (power circuit)		1000	1000	1000	1000	1000	1000	1000
Rated impulse withstand voltage U _{imp} (kV) (pov	ver circuit)	12	12	12	12	12	12	12
Rated insulation voltage U _i (V) (control circuit)		300	300	300	300	300	300	300
Rated impulse withstand voltage U _{imp} (kV) (con	trol circuit)	4	4	4	4	4	4	4
Rated operational currents I (A) accor	ding to IEC 60947-3							
Rated voltage	Utilisation category	A/B ⁽¹⁾						
415 VAC	AC-21 A / AC-21 B	800/800	1000/1000		1600/1600	-/2000	-/2500	-/3200
415 VAC	AC-22 A / AC-22 B	800/800	1000/1000	1250/1250	1600/1600	-/2000	-/2500	-/3200
415 VAC	AC-23 A / AC-23 B	800/800	1000/1000	1250/1250	1250/1250	-/1600	-/1600	-/1600
500 VAC	AC-21 A / AC-21 B	800/800	1000/1000	1250/1250	1600/1600	-/2000	-/2000	-/2000
500 VAC	AC-22 A / AC-22 B	630/630	800/800	1000/1000	1600/1600	/2000	/2000	72000
500 VAC	AC-23 A / AC-23 B	630/630	630/630	800/800	1000/1000			
690 VAC ⁽³⁾	AC-21 A / AC-21 B	800/800	1000/1000	1250/1250	1600/1600	-/2000	-/2000	-/2000
690 VAC ⁽³⁾	AC-22 A / AC-22 B	630/630	800/800	1000/1000	1000/1000	72000	72000	72000
690 VAC ⁽³⁾	AC-23 A / AC-23 B	630/630	630/630	800/800	800/800			
220 VDC	DC-21 A / DC-21 B	800/800	1000/1000	1250/1250	1250/1250			
220 VDC	DC-22 A / DC-22 B	800/800	1000/1000	1250/1250	1250/1250			
220 VDC	DC-23 A / DC-23 B	800/800	1000/1000	1250/1250	1250/1250			
440 VDC ⁽²⁾	DC-21 A / DC-21 B	800/800	1000/1000	1250/1250	1250/1250			
440 VDC (2)	DC-22 A / DC-22 B	800/800	1000/1000	1250/1250	1250/1250			
440 VDC (2)		800/800		1250/1250				
	DC-23 A / DC-23 B	000/000	1000/1000	1230/1230	1250/1250			
Rated operational currents ${\sf I}_{\scriptscriptstyle m e}$ (A) accor	1 -	ı						
Rated voltage	Utilisation category							
415 VAC	AC-31 B	800	1000	1250	1600	2000	2500	3200
415 VAC	AC-32 B	800	1000	1250	1250	2000	2000	2000
415 VAC	AC-33 B	800	1000	1000	1000	1250	1250	1250
Current rated as conditional short-circ	uit with fuse gG DIN, acc	ording to IE	C 60947-3	3				
Prospective fuse protected short-circuit withst	and at 415 VAC(kA rms)	50	50	100	100			
Prospective fuse protected short-circuit withst	and at 690 VAC(kA rms)	50	50	50				
Associated fuse rating (A)		800	1000	1250	2x800			
Short-circuit withstand without protec	tion as per IFC 60947-3			•				
Rated short-time withstand current 0.3s I _{cw} at	· · · · · · · · · · · · · · · · · · ·	64	64	64	78	78	78	78
Rated short-time withstand current 1s I _{cw} at 41		35	35	35	50	50	50	50
Rated peak withstand current at 415 VAC (kA		55	55	80	110	120	120	120
					110	120	120	120
Short-circuit withstand without protect	•	l						
Rated short-time withstand current 30 ms I _{cw} at 4				0.5				=0
Rated short-time withstand current 60 ms I _{cw} at 4	F15 VAC (KA rms)	20	20	25	32	50	50	50
Connection								
Minimum Cu cable cross-section as per IEC 6	0947-1 (mm²)	2 x 185						
Recommended Cu busbar cross-section (mm	2)	2 x 50 x 5	2 x 63 x 5	2 x 60 x7	2 x 100 x 5	3 x 100 x 5	2 x 100 x 10	3 x 100 x 10
Maximum Cu cable cross-section (mm²)		4 x 185	4 x 185	4 x 185	6 x 185			
Maximum Cu busbar width (mm)		63	63	63	100	100	100	100
Min./max. tightening torque (Nm)		9/13	9/13	20/26	40/45	40/45	40/45	40/45
Switching time (rated voltage, after red	eiving command)							
Transfer time I-II or II-I (s)	3	2.8	2.8	2.8	2.9	2.8	2.8	2.8
I-0 or II-0 (s)		1.4	1.4	1.4	1.4	1.8	1.8	1.8
Contact transfer time ("black-out" I-II) minimun	n (s)	1.4	1.4	1.4	1.5	1	1	1
Power supply	. (-)							
		100/000	100/000	100/000	100/000	100/000	100/000	100/000
Min./max. power (VAC)		166/332	166/332	166/332	166/332	166/332	166/332	166/332
Control supply power demand								
Demand/rated power (VA) - ATyS r, ATyS d		460/184	460/184	460/184	460/230	812/322	812/322	812/322
Demand/rated power (VA) - ATyS t, g , p		482/206	482/206	482/206	482/252	834/344	834/344	834/344
Mechanical specifications								
Durability (number of operating cycles)		4,000	4,000	4,000	3,000	3,000	3,000	3,000
Weight ATyS r 3 P / 4 P (kg)		27.9/ 32.2	28.4/32.9	28.9/33.6	33.1/39.4	50.7/61.6	50.7/61.6	61.0/ 75.3
Weight ATyS d 3 P / 4 P (kg)		28.5/ 32.8	29.0/33.5	29.5/34.2	33.7/40.0	51.3/62.2	51.3/62.2	61.6/ 75.9
			2. 30.3					

⁽¹⁾ Category with index A = frequent operation - Category with index B = infrequent operation.
(2) 3-pole device with 2 pole in series for the "+" an 1 pole for the "-".
4-pole device with 2 poles in series by polarity.
(3) Interphase barriers must be installed on the products. (4) Values given at 690 VAC.

EN 65 ATYS g - 541998E - SOCOMEC

11. PREVENTIVE MAINTENANCE AND ROUTINE ANNUAL **INSPECTION**

It is recommended to verify at least once a year:

- Review event log (ATyS p).
- Check number of operations and other switch status figures (ATyS p).
- Visual inspection for damage.
- Temperature measurement of terminals is within expected range.
- Test transfer of load: operate the product in a full operating cycle (I 0 II 0 I: Auto and Manual).
- Observe voltage levels of both sources within expected range.



Note: Maintenance should be planned carefully and carried out by qualified and authorised personnel. Consideration of the critical level and application where the product is installed should form an essential and integral part of the maintenance plan. Good engineering practice is imperative whilst all necessary precautions must be taken to ensure that the intervention (whether directly or indirectly) remains safe in all aspects.



WARNING! The use Megohmmeter when the motor or electronic modules are connected is prohibited on this product as the connection terminals are intrinsically connected to the sensing circuit.

66 EN

12. TROUBLE SHOOTING GUIDE

The ATyS g does not operate electrically	 Verify the power supply on terminals 101-102 and 201-202: 208 - 277 Vac ±20 % Verify that the front selector switch is in position (AUT) Verify that contacts 313 and 317 are open. Verify that the power LED (Green) is On whilst the fault LED (RED) is off. Verify that the Ready light on the ATS controller is a steady Green light. Verify presence of at least one green LED on the source supply available LED's . Verify that the product is available with contacts 63A / 64A and 63B / 64B closed. Verify whether the problem is limited to the ATS controls + the motorisation module or just the ATS controls. Note: To isolate the fault to the ATS controller or the complete unit, close contacts 312 with 317 whilst ensuring that 313 and 317 remain open. This will force the ATyS g into remote control which will bypass the ATS controller and accept position orders from contacts 314 to 317.
It is not possible to manually operate the switch	 Verify that the front selector switch position is on the Manual position. Make sure that the product is not padlocked Verify the rotation direction of the handle Apply a sufficient progressive action in the direction as indicated on the handle
Electrical operation does not correspond to external order I,O,II	 Verify the selected control logic wiring (impulse or contactor) Verify the connector connections.
Impossible to padlock	 Verify that the front selector switch is in manual position Verify that the emergency handle for manual operation is not inserted into the ATyS manual slot. Verify that the ATyS is in 0 position (Padlocking is only possible in 0 position for standard products)
The ready light remains flashing	The Ready light flashes so as to indicate that the saved configuration is not identical to what is displayed on the ATS controller. This could be due to a user not yet having saved the configuration settings or that the potentiometer setting was changed and has not been saved. To get a steady READY light either revert to the settings in the ATyS g or save the new settings. To save put into manual mode and press the PROG OK button momentarily.
The AUT light is flashing	 The AUT LED will be steady green when in AUTO Mode and will be flashing green when the ATyS g has timers running. This is usually a normal indication.
The fault LED is ON (Motorisation)	 The FAULT / MANUAL LED on the motorisation module is on when in manual mode (this is normal) and in AUT Mode when there is an internal fault in the ATyS g. To reset a fault condition switch the ATyS g from AUT to Manu and back to AUT. Should the fault LED remain on you will need to localize and clear the fault prior to reset. The FAULT / Manual LED will also be on when contact 313 is closed with 317. (Force the ATyS to off position). This is a normal condition. The FAULT LED will also illuminate when the aux power supply is present but out of range. Should the Fault LED remain on abnormally, contact SOCOMEC.
The fault LED is on (ATS Controller)	Switch the ATyS g from AUT to Manual and back to AUT. Should the fault condition remain contact SOCOMEC)
Sources availability LEDs and fault LED are blinking	Check phase rotation consistency between both sources.Check neutral position consistency between both sources.

13. ACCESSORIES

13.1. Terminal shrouds

Use

IP2X protection against direct contact with terminals or connecting parts.

Advantages

Perforations allow remote thermographic inspection without the need to remove the shrouds.

Rating (A)	Frame size	No. of poles	Position	Reference
125 200	B3	3 P	top / bottom / front (I) / rear (II)	2694 3014 ⁽¹⁾⁽²⁾
125 200	B3	4 P	top / bottom / front (I) / rear (II)	2694 4014(1)(2)
250 400	B4	3 P	top / bottom / front (I) / rear (II)	2694 3021 (1)(2)
250 400	B4	4 P	top / bottom / front (I) / rear (II)	2694 4021 ⁽¹⁾⁽²⁾
500 630	B5	3 P	top / bottom / front (I) / rear (II)	2694 3051(1)(2)
500 630	B5	4 P	top / bottom / front (I) / rear (II)	2694 4051 ⁽¹⁾⁽²⁾



13.2. Terminal screens

Use

Top and bottom protection against direct contact with terminals or connection parts.

For upstream and downstream protection, order the reference once.

Rating (A)	Frame size	No. of poles	Position	Reference
125 200	B3	3 P	top / bottom	1509 3012
125 200	B3	4 P	top / bottom	1509 4012
250 400	B4	3 P	top / bottom	1509 3025
250 400	B4	4 P	top / bottom	1509 4025
500 630	B5	3 P	top / bottom	1509 3063
500 630	B5	4 P	top / bottom	1509 4063
800 1250	B6	3 P	top / bottom	1509 3080
800 1250	B6	4 P	top / bottom	1509 4080
1600	B7	3 P	top / bottom	1509 3160
1600	B7	4 P	top / bottom	1509 4160
2000 3200	B8	3 P	top / bottom	1509 3200
2000 3200	B8	4 P	top / bottom	1509 4200



Inter-phase barrier

Hea

Safe isolation between the terminals, essential for use at 690 VAC or in a polluted or dusty atmosphere.

Rating (A)	Frame size	No. of poles	Reference
125 200	B3	3 P	2998 0033
125 200	B3	4 P	2998 0034
250 400	B4	3 P	2998 0023
250 400	B4	4 P	2998 0024
500 630	B5	3 P	2998 0013
500 630	B5	4 P	2998 0014
800 3200	B6 B8	3/4 P	included

⁽¹⁾ To shroud front switch top and bottom 2 references required.

⁽²⁾ To fully shroud front, rear, top and bottom 4 references required.


13.3. Bridging bars

Use

For bridging power terminals on the top or bottom side of the switch. One piece required per pole.

Rating (A)	Frame size	No. of poles	Section (mm)	Reference				
125 200	B3	3 P	20 x 2.5	4109 3019				
125 200	B3	4 P	20 x 2.5	4109 4019				
250	B4	3 P	25 x 2.5	4109 3025				
250	B4	4 P	25 x 2.5	4109 4025				
315 400	B4	3 P	32 x 5	4109 3039				
315 400	B4	4 P	32 x 5	4109 4039				
500	B5	3 P	32 x 5	4109 3050				
500	B5	4 P	32 x 5	4109 4050				
630	B5	3 P	50 x 5	4109 3063				
630	B5	4 P	50 x 5	4109 4063				
800 1000	B6	3 P	50 x 6	4109 3080				
800 1000	B6	4 P	50 x 6	4109 4080				
1250	B6	3 P	60 x 8	4109 3120				
1250	B6	4 P	60 x 8	4109 4120				
1600	B7	3 P	90 x 10	4109 3160				
1600	B7	4 P	90 x 10	4109 4160				



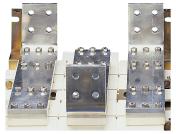

13.4. Copper bar connection kits

Use

Enables:


- connection between the two power terminals of the same pole for 2000 to 3200 A ratings (Fig. 1 and Fig 2)
- up or downstream bridging connection (Fig. 3).


For 3200 A rating, the connection pieces (part A) are delivered bridged from factory. Bolt sets must be ordered separately.

Further details for these specific accessories are available in the user guide downloadable from www.socomec.com.

The numbers given in the table below refer to the contact connection.

		2000 – 2500 A			3200 A			
	Part	Fig. 1	Fig. 2	Fig. 3	Fig. 1	Fig. 2	Fig. 3	
	number	Conn	ection	Outage bridge I	Connection		Outage bridge I	
		Flat	Onsite	and II	Flat	Onsite	and II	
Connection part A	2619 1200	1	1	2(2)	included	included	included	
Screw kit 35 mm part B	2699 1201	1 ⁽¹⁾		2(2)	1(1)		2(2)	
Screw kit 45 mm part B	2699 1200	1(1)			1(1)			
T + screw kit part C	2629 1200		1	1		1	1	
Bracket + screw kit part D	2639 1200		1			1		
Bar + screw kit part E	4109 0320			1			1	

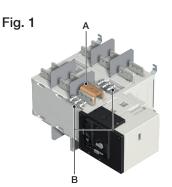

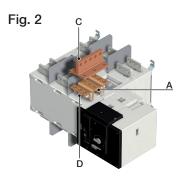


Then multiply the quantity by the number of contacts you need.

- ⁽¹⁾ Choose the right length according to the width of the bars in place. If more than 20 mm, use 45 mm screws.
- $^{\mbox{\tiny (2)}}\mbox{For the bridging setup you need 2 parts for each pole as the contacts of units I and II are connected.$

For example, for a 4 P 2500 A with onsite upstream connection (Fig. 2) and downstream bridging (Fig. 3), please order

16 x 2619 1200 12 x 2629 1200 8 x 2699 1201 4 x 4109 0320

8 x 2639 1200

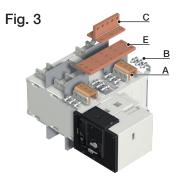

13.5. Solid neutral

Use

The connection kit enables the connection between the input and output neutrals, without any need to switch the neutral.

Rating (A)	Frame size	Reference
125 200	B3	9509 0012
200 315	B4	9509 0025
400	B4	9509 0040
500 630	B5	9509 0063
800 1000	B6	9509 0080
1250	B6	9509 0120
1600	B7	9509 0160

13.6. Autotransformer 400/230 VAC

For applications without neutral, this autotransformer provides the 230 VAC required to power these ATyS products.

Rating (A)	Frame size	Reference		
125 3200	B3 B8	1599 4064		

13.7. DC power supply

Allows an ATyS to be supplied from a 12, 24 or 48 VDC source. To be positioned as close as possible to the DC power supply source.

Rating (A)		Frame size	Operating voltage	Reference	
	125 3200	B3 B8	12 VDC / 230 VAC	1599 5012	
	125 3200	B3 B8	24 VDC / 230 VAC	1599 5112	
	125 1600	B3 B7	48 VDC / 230 VAC	1599 5212	

From 125 to 630 A


13.8. Voltage sensing and power supply kit

Use

For power supply and voltage measurement (4 wire, three-phase) for the ATyS t, g and p.

Routing of the conductors is controlled, which means that no specific protective device is necessary for these connections. The kit can be fitted on the top or bottom of the switch.

Note: the 3-pole version does not integrate the power supply.

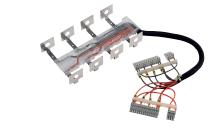

From 800 to 3200 A



For ATyS t, g and p - 3 poles		
Rating (A)	Frame size	Reference
125 200	B3	1559 3012
250	B4	1559 3025
315 400	B4	1559 3040
500 630	B5	1559 3063
800 1000	B6	1559 3080
1250	B6	1559 3120
1600	B7	1559 3160
2000 3200	B8	1559 3200

For ATyS t, g and p - 4 poles			
Rating (A)	Frame size	Reference	
125 200	B3	1559 4012	
250	B4	1559 4025	
315 400	B4	1559 4040	
500 630	B5	1559 4063	
800 1000	B6	1559 4080	
1250	B6	1559 4120	
1600	B7	1559 4160	
2000 3200	B8	1559 4200	

13.9. Voltage relay

Use

The ATyS DS is a voltage relay for monitoring a three-phase power supply source.

The fault relay will close as soon as a fault is detected on the supply being monitored.

Rating (A)	Reference
DS	192X 0056



13.10. Door protective surround

Hea

When direct access to the ATyS front face (mode selection, manual operation, display....) is required, the door surround can be utilised to provide a clean and safe finish to the panel's cut-out.

1539 **0012**

1539 0080

Rating (A)	Frame size	Reference
For ATyS d, t, g and p		
800 3200	B6 B8	1529 0080
125 630	B3 B5	1529 0012
Rating (A)	Frame size	Reference
For ATyS r		



13.11. Auxiliary contacts (additional)

B3 ... B5

B6 ... B8


Use


125 ... 630 800 ... 3200

Pre breaking and signalling of positions I and II: each reference provides a single factory or customer fitted NO/NC contacts for both positions.

Low level auxiliary contacts: please consult us.

included

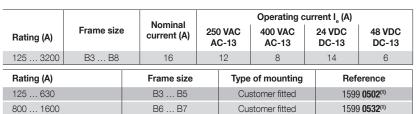

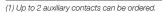





13.12. 3 position padlocking (I - 0 - II)

B8

Use

2000 ... 3200

Enables the ATyS to be padlocked in the 3 positions 0, I and II (factory fitted).

Rating (A)	Frame size	Reference
125 630	B3 B5	9599 0003
800 3200	B6 B8	9599 0004



13.13. RONIS Key interlocking system

Use

With the product in manual mode, it enables locking in position 0 using a RONIS EL11AP lock (factory fitted).

As standard, locking in position 0.

Optional padlocking in 3 positions: locking in position I, 0 or II.

Rating (A)	Frame size	Reference
125 630	B3 B5	9599 1006
800 3200	B6 B8	9599 1004



13.14. Plug_in optional module

A maximum of one module can be fitted to each ATyS g.

RS485 MODBUS® communication

RS485 link with MODBUS® protocol (spedd up to 38400 bauds)

Description of accessories	Suitable for	Reference
RS485 MODBUS communication	ATyS g, p	4825 0092





13.15. Remote interface

To remotely display source availability and position indication typically used on the front of a panel when the product is enclosed. Interfaces are powered from the ATyS transfer switch via the RJ45 connection cable. Maximum cable length: 3 m.

D10 - for ATyS d, t and g

To display source availability and position indication on the front panel of an enclosure. Protection degree: IP21.

D20 - for ATyS p

In addition to the functions of the ATyS D10, the D20 displays measurements and enables control and configuration from the front of a

Protection degree: IP21.

Door mounting

2 holes Ø 22.5. ATyS transfer switch connection via RJ45 cable, not isolated.

Cable available as an accessory.






400E	CON LOVE	OF USE		
tic	4			
	_		_	
η.	-:11:-			
D	rillir	and		

Description of accessories	Reference
D10	9599 2010
D20	9599 2020

Interfaces are powered from the ATyS



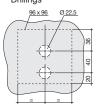

13.16. Connection cable for remote interface

Use

To connect between a remote interface (type D10 or D20) and an ATyS transfer switch (ATyS d, t, g or p).

Characteristics

RJ45 8 wire straight-through, non isolated cable. Length 3m.

For ATyS d, t, g and p			
Туре	Length	Reference	
RJ45 cable	3 m	1599 2009	



13.17. Sealable cover

Use - for ATyS t and g

Prevents access to the ATyS t and g configuration potentiometers and DIP switches (seals supplied).

Rating (A)	Frame size	Reference
125 3200	B3 B8	9599 0000



13.18. Auto/Manual key selector

Replaces the standard Auto/Manual selector knob with a key selector, providing added security by preventing unauthorised use of product. Customer assembly required.

, , ,	•	
Rating (A)	Frame size	Reference
125 3200	B3 B8	9599 1007



14. SPARE PARTS

14.1. Electronic module

The electronic module of ATyS d, t, g and p can be easily replaced in case of problems, even when the load is supplied. Provided with required connectors.

Product model	References
ATyS d	9539 2001
ATyS t	9549 2001
ATyS g	9559 2001
ATyS p	9579 2001



14.2. Motorisation module

The motorisation module of ATyS r, d, t, g and p can be easily replaced in case of problems, even when the load is supplied. Provided with required connectors.

Rating	References
125 200 A	9509 5020
250 400 A	9509 5040
500 630 A	9509 5063
800 1250 A	9509 5120
1600 A	9509 5160
2000 3200 A	9509 5320



14.3. Power section

References to be used for replacing the switching module of ATyS r, d, t, g or p. Please contact SOCOMEC.



14.4. Kit of connectors

The kit contains all connectors need to be replaced or missing for ATyS r, d,t, g or p.

Connectors Kit for	Reference
ATyS r, d, t, g, p	1609 0597



14.5. Metal mounting brackets

This accessory may also be used to replace the original metal mounting brackets. Composed of 2 metal mounting brackets and 4 plastic covers.

Rating (A)	Frame size	Reference
125 630	B3 B5	1509 0003




15. ATYS FAMILY: ORDERING INFORMATION

The following is an ordering guide for ATYS Motorised Transfer Switches delivered inclusive of the emergency handle and storage clip. This guide is intended so as to explain the logic behind SOCOMEC ATYS reference numbers.


When ordering please consult the latest SOCOMEC catalogue.

Typical UL 1008 (Optional Standby Power) ATYS reference

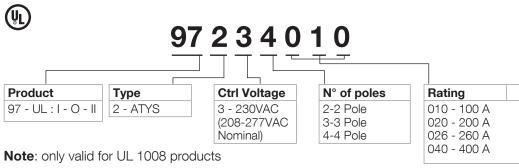

Typical IEC 60947-6-1 ATYS reference



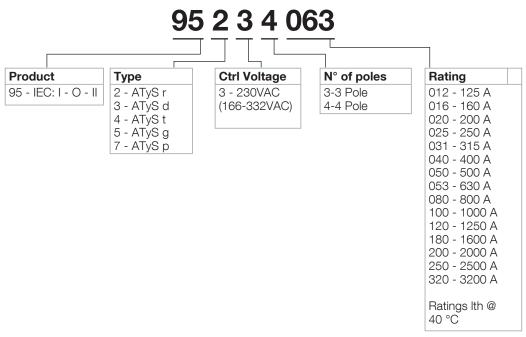

ANNEXE I. MODBUS® COMMUNICATION ADDRESS AND **DESIGNATION DETAILS**



Note

To authorise a change in configuration: define adress HEXA E300 as 1000.

Factory set RS485 parameters:

Address: 10 Baud Rate: 38400

Stop Bit: 1 Parity: None

Annexe I - 1. Input/Output state

Function 3 Codes

Dec address	Hex address	Words count	Description	Unit
51968	0xCB00	1	Input count	-
51969	0xCB01	1	Bit 0 : Input 1 Open or ClosedBit x : Input x Open or Closed	-
51970	0xCB02	1	Output count	-
51971	0xCB03	1	Bit 0 : Output 1 Open or ClosedBit x : Output x Open or Closed	-

Annexe I - 2. Hour/Date setting

Function 3 and 16 Codes

Dec address	Hex address	Words count	Description	Unit
57600	0xE100	1	Day	-
57601	0xE101	1	Month	-
57602	0xE102	1	Year	-
57603	0xE103	1	Hour	-
57604	0xE104	1	Minute	-
57605	0xE105	1	Second	-

Annexe I - 3. Action system

Function 6 Codes

«Product configuration storage» shall be executed after any change or grouped changes in order to register new values. Only the values within the authorised range will be registered. If «Product configuration storage» is not executed the previous values will be restored after restart of the controller.

Dec address	Hex address	Words count	Description	Unit
57856	0xE200	1	Action 0xA1 : Product Configuration storage 0xB2 : Product Reset	-

Annexe I - 4. Status

Function 3 Codes

Dec address	Hex address	Words count	Description	Unit
20480	0x5000	2	Date & Time Current	-
20482	0x5002	1	Opearting Mode 0x0000 : Manual Mode 0x0001 : Locked Mode 0x0010 : Auto Mode 0x0020 : Remote control mode 0x0040 : Inhibit Mode	-
20483	0x5003	1	Switch Position 0: Unknown 1: Position 0 2: Position 1 3: Position 2	-
20484	0x5004	1	Source 2 Start Generator relay State 0 : Not Active 1 : Active	-
20485	0x5005	1	Priority 0 : Network 1 : Source 1 2 : Source 2	-
20486	0x5006	1	Source1 State 0 : Under Threshold BusBar 1 : Present 2 : Available	-
20487	0x5007	1	Source2 State 0 : Under Threshold BusBar 1 : Present 2 : Available	-
20488	0x5008	1	Test in progress 0x0000 : None 0x0001 : TOF 0x0002 : EOF 0x0004 : TOL 0x0008 : EOL	-
20489	0x5009	1	Fault summary 0 : None 1 : Alarm 2 : Fault	-
20490	0x500A	1	Alarm/Fault Code 0x0000: NONE 0x0001: OPER_FACTOR (Alarm) 0x0002: NEUTRAL (Fault) 0x0004: FAULT_1 (Fault) 0x0008: FAULT_2 (Fault) 0x0010: ALARM_1 (Alarm) 0x0020: ALARM_2 (Alarm) 0x0040: ROTPH_1 (Alarm) 0x0080: ROTPH_2 (Alarm) 0x0100: UNB_1 (Alarm) 0x0200: UNB_2 (Alarm) 0x0400: POSITION_0 (Fault) 0x0800: POSITION_1 (Fault) 0x1000: MAINFAULT (Fault) 0x4000: MOTOR FAULT (Fault) 0x8000: AUTCONF FAILED (Alarm)	-

Dec address	Hex address	Words count	Description	Unit
20491	0x500B	1	Last Switch over cause 0: None 1: Manual 2: Remote controlled 3: Under voltage source 1 4: Under voltage source 2 5: Over voltage source 2 7: Under Frequence source 1 8: Under Frequence source 2 9: Over Frequence source 1 10: Over Frequence source 2 11: Unbalance Source 1 12: Unbalance Source 2 13: Rotation Source 1 14: Rotation Source 2	-
20492	0x500C	2	Firmware last flash date	-
20494	0x500E	2	Date of first commissioning	-
20496	0x5010	8	Product identification	-
20504	0x5018	1	Power supply status 0 : No network present for DPS 1 : Source 1 present for DPS 2 : Source 2 present for DPS 3 : Sources 1+2 present for DPS	-
20511	0x501F	1	BET Mode 0 : Not present 1 : Auto 2 : Manual 3 : Remote control 4 : Locked	-
20512	0x5020	1	BET Available 0 : Not available 1 : Available	-
20513	0x5021	1	Product is available 0 : Not available 1 : Available	-

Annexe I - 5. Measurement table (no CT/VT affected)

Function 3 Codes

Dec address	Hex address	Words count	Description	Unit
20736	0x5100	2	Date & Time current	S
Down Stream Voltage				
20738	0x5102	1	U12	V 10 ⁻²
20739	0x5103	1	U23	V 10 ⁻²
20740	0x5104	1	U31	V 10 ⁻²
20741	0x5105	1	V1	V 10 ⁻²
20742	0x5106	1	V2	V 10 ⁻²
20743	0x5107	1	V3	V 10 ⁻²
20744	0x5108	1	Fr	Hz 10 ⁻²
Up Stream Voltage			·	
20745	0x5109	1	Source 1 : U12	V 10 ⁻²
20746	0x510A	1	Source 1 : U23	V 10 ⁻²
20747	0x510B	1	Source 1 : U31	V 10 ⁻²
20748	0x510C	1	Source 1 : V1	V 10 ⁻²
20749	0x510D	1	Source 1 : V2	V 10 ⁻²
20750	0x510E	1	Source 1 : V3	V 10 ⁻²
20751	0x510F	1	Source 1 : F	Hz 10 ⁻²
20752	0x5110	1	Source 2 : U12	V 10 ⁻²
20753	0x5111	1	Source 2 : U23	V 10 ⁻²
20754	0x5112	1	Source 2 : U31	V 10 ⁻²
20755	0x5113	1	Source 2 : V1	V 10 ⁻²
20756	0x5114	1	Source 2 : V2	V 10 ⁻²
20757	0x5115	1	Source 2 : V3	V 10 ⁻²
20758	0x5116	1	Source 2 : F	Hz 10 ⁻²
Up Stream Status				
20791	0x5137	1	Neutral position 0 : Left 1 : Right	-
20792	0x5138	1	Source 1 : Single voltage unbalance	% / 100
20793	0x5139	1	Source 1 : Phases rotation 0 : N/A 1 : ABC 2 : ACB	-
20794	0x513A	1	Source 2 : Single voltage unbalance	% / 100
20795	0x513B	1	Source 2 : Phases rotation 0 : N/A 1 : ABC 2 : ACB	-

78 EN

Annexe I - 6. Timers state

Function 3 Codes

Dec address	Hex address	Words count	Description	Unit
21248	0x5300	2	Date & Time Current	sec.
21250	0x5302	1	Source 1 : SFT Timer / 1FT	sec.
21251	0x5303	1	Source 1 : SAT Timer / 1RT	sec.
21252	0x5304	1	Source 1: 0RT Timer / 10T	sec.
21253	0x5305	1	Source 2 : SFT Timer / 2FT	sec.
21254	0x5306	1	Source 2 : SAT Timer / 2RT Or 2AT	sec.
21255	0x5307	1	Source 2: LAT Timer / 2CT	sec.
21256	0x5308	1	Source 2: 0RT Timer / 2OT	sec.
21257	0x5309	1	Source 2 : FST Timer / 2ST	sec.
21258	0x530A	1	DBT Timer / 0DT	sec.
21261	0x530D	1	TOL (Test On Load Duration) Timer	sec.
21262	0x530E	1	T3T (Test on load end timer) Timer	sec.
21264	0x5310	1	TOF (Test Off Load Duration) Timer	sec.
21265	0x5311	1	STOLT (Time before Ord. Ext On Load) Timer / E1T	sec.
21266	0x5312	1	ETOLT (Time after Ord. Ext On Load) Timer / E3T	sec.
21268	0x5314	1	EOLTOT (Ord. Ext On Load Duration) Timer / E2T	sec.
21269	0x5315	1	STOFT (Time before Ord. Ext Off Load) Timer / E5T	sec.
21270	0x5316	1	ETOFT (Time after Ord. Ext Off Load) Timer / E7T	sec.
21272	0x5318	1	EOFTOF (Ord. Ext Off Load Duration) Timer / E6T	sec.
21275	0x531B	1	Source 1 : SFT Timer / 1FT state 1 : Active 0 : Not active	-
21276	0x531C	1	Source 1 : SAT Timer / 1RT state 1 : Active 0 : Not active	-
21278	0x531E	1	Source 2 : SFT Timer / 2FT state 1 : Active 0 : Not active	-
21279	0x531F	1	Source 2 : SAT Timer / 2RT Or 2AT state 1 : Active 0 : Not active	-

Annexe I - 7. Commands

Function 6 Codes

Dec address	Hex address	Words count	Description	Unit
21761	0x5501	1	Set Operating Mode 3 : Auto 4 : Inhibit 5 : Remote Control	-
21763	0x5503	1	Set Position 0 : None 1 : Position in Zero 2 : Position in 1 3 : Position in 2	-

EN 79 ATYS g - 541998E - SOCOMEC

Annexe I - 8. User commands

Function 6 Codes

Dec address	Hex address	Words count	Description	Unit
21844	0x5554	1	Product user counters erase 0x01: Genset start counter erase 0x02: Genset runtime counter erase 0x04: Secondary source presence counter erase 0x08: Secondary source active duration counter erase 0x10: Source 1 load supplied duration counter erase 0x20: Source 2 load supplied duration counter erase	-

Annexe I - 9. Setup threshold for upstream Voltages

Function 3

Dec address	Hex address	Words count	Description	Unit
22272	0x5700	1	Source 1 : Overvoltage threshold	%
22273	0x5701	1	Source 1 : Overvoltage hysteresis threshold	%
22274	0x5702	1	Source 1 : Undervoltage threshold	%
22275	0x5703	1	Source 1 : Undervoltage hysteresis threshold	%
22276	0x5704	1	Source 2 : Overvoltage threshold	%
22277	0x5705	1	Source 2 : Overvoltage hysteresis threshold	%
22278	0x5706	1	Source 2 : Undervoltage threshold	%
22279	0x5707	1	Source 2 : Undervoltage hysteresis threshold	%
22280	0x5708	1	Source 1 : Unbalanced voltage threshold	%
22281	0x5709	1	Source 1 : Unbalanced voltage hysteresis threshold	%
22282	0x570A	1	Source 2 : Unbalanced voltage threshold	%
22283	0x570B	1	Source 2 : Unbalanced voltage hysteresis threshold	%
22284	0x570C	1	Source 1 : Overfrequency threshold	%
22285	0x570D	1	Source 1 : Overfrequency hysteresis threshold	%
22286	0x570E	1	Source 1 : Underfrequency threshold	%
22287	0x570F	1	Source 1 : Underfrequency hysteresis threshold	%
22288	0x5710	1	Source 2 : Overfrequency threshold	%
22289	0x5711	1	Source 2 : Overfrequency hysteresis threshold	%
22290	0x5712	1	Source 2 : Underfrequency threshold	%
22291	0x5713	1	Source 2 : Underfrequency hysteresis threshold	%

80 EN

Annexe I - 10. Setup Input/Output

Function 3

Dec address	Hex address	Words count	Description	Unit
23040	0x5A00	1	In 5 - StartGen board input 1 function 3: TFL - Test off load	-
23041	0x5A01	1	In 6 - StartGen board input 2 function 0: None 2: TOL - Test on load 7: PRI - Priority (Source 2 if active)	-
23044	0x5A04	1	In 1 - Ext display connector board input 1 function 14 : MSR - Test on Load priority 23 : PR0 - Without Priority	-
23045	0x5A05	1	In 2 - Ext display connector board input 2 function 9: SS2 - Validation Stabilization source 2 26: DTC - Compressor management (Datacenter)	-
23046	0x5A06	1	In 3 - Ext display connector board input 3 function 6 : RTC - Manual/Automatic Retransfer	
23047	0x5A07	1	In 4 - Ext display connector board input 4 function 1: INH - Inhibition	-
23068	0x5A1C	1	Out 1 Ext display connector board relay output function 11: POP - Product operational	
23069	0x5A1D	1	Out 1 Ext display connector board relay output state 0 : NO 1 : NC	

Annexe I - 11. Setup network

Function 3

Dec address	Hex address	Words count	Description	Unit
22784	0x5900	1	Network Type 0: 1BL 1: 2NBL 2: 2BL 3: 3NBL 4: 3BL 5: 4NBL 6: 4BL 7: 41NBL 8: 42NBL	-
22785	0x5901	1	Neutral Detection 0 : LEFT 1 : RIGHT 2 : AUTO	-
22786	0x5902	1	Phase rotation 0 : Verify Compatible («Auto») 1 : Verify ABC 2 : Verify ACB	-
22787	0x5903	1	Nominal Voltage	V
22788	0x5904	1	Nominal Frequency 0:50Hz 1:60Hz	Hz
22789	0x5905	1	Type of Application 0: Main - Main 1: Main - Gen	-
22790	0x5906	1	Generator start order inhibit 0 : NO 1 : YES	-
22792	0x5908	1	Priority - Power Supply 0 : Network 1 : Source1 2 : Source2	-
22793	0x5909	1	Priority - Test On Load 0 : NO 1 : YES	-
22794	0x590A	1	Priority - External Order On Load 0 : NO 1 : YES	-
22795	0x590B	1	Manual retransfer 0 : NO 1 : YES	-

82 EN

Annexe I - 12. Communication settings

Function 3, 6 and 16 Codes

Dec address	Hex address	Words count	Description	Unit
23296	0x5B00	1	Jbus Address	-
23297	0x5B01	1	UART Baud Rate 2:9600 bps 3:19200 bps 4:38400 bps	-
23298	0x5B02	1	UART Parity 0 : None 1 : Even 2 : Odd	-
23299	0x5B03	1	UART Stop bit number 1: 1 stop bit 2: 2 stop bits	-
23307	0x5B0B	8	Product identification	-

Annexe I - 13. Product counters

Function 3 Codes

Dec address	Hex address	Words count	Description	Unit
23552	0x5C00	1	Total Cycles counter	-
23553	0x5C01	1	Total Position 0 switches counter	-
23554	0x5C02	1	Total Position 1 switches counter	-
23555	0x5C03	1	Total Position 2 switches counter	-
23556	0x5C04	1	Total switches counter	-
23557	0x5C05	1	Cycles in auto mode (including control mode) counter	-
23558	0x5C06	1	Position 0 switches in auto mode (including control mode) counter	-
23559	0x5C07	1	Position 1 switches in auto mode (including control mode) counter	-
23560	0x5C08	1	Position 2 switches in auto mode (including control mode) counter	-
23561	0x5C09	1	Total switches in auto mode (including control mode) counter	-
23562	0x5C0A	1	Cycles in manual mode counter	-
23563	0x5C0B	1	Position 0 switches in manual mode counter	-
23564	0x5C0C	1	Position 1 switches in manual mode counter	-
23565	0x5C0D	1	Position 2 switches in manual mode counter	-
23566	0x5C0E	1	Total switches in manual mode counter	-
23567	0x5C0F	1	Cycles in control mode counter	-
23568	0x5C10	1	Position 0 switches in control mode counter	-
23569	0x5C11	1	Position 1 switches in control mode counter	-
23570	0x5C12	1	Position 2 switches in control mode counter	-
23571	0x5C13	1	Total switches in control mode counter	-
23572	0x5C14	2	Product power on time	-
23574	0x5C16	1	Start order activation counter	-
23575	0x5C17	2	Start order active duration	-
23577	0x5C19	2	Secondary source presence duration	-
23579	0x5C1B	2	Secondary source active (i.e. present and switch position at secondary source) duration	-
23581	0x5C1D	2	Source 1 load supplied duration	-
23583	0x5C1F	2	Source 2 load supplied duration	-

CORPORATE HQ CONTACT: SOCOMEC SAS 1-4 RUE DE WESTHOUSE 67235 BENFELD, FRANCE

www.socomec.com



